



Mecanil Products

MECANIL SG220 / SG280

Manual

GENERATION 2

Model

<input type="checkbox"/>	SG220 G2	• Works with 2 hydraulic lines, pressure/pressure (grapple open/close). • Electric wire on the crane boom. • Pushbuttons that can be installed in joystick.
<input type="checkbox"/>	SG220 RC-T G2	• Works with 2 hydraulic lines, pressure/pressure (grapple open/close). • Integrated wireless control. • Wireless control with handheld remote.
<input type="checkbox"/>	SG280 RC-T G2	• Works with 2 hydraulic lines, pressure/pressure (grapple open/close). • Integrated wireless control. • Wireless control with handheld remote.
<input type="checkbox"/>	SG220 RC-M G2	• Works with 2 hydraulic lines, pressure/pressure (grapple open/close). • Integrated wireless control. • Wireless control with pushbuttons that can be installed in joystick.
<input type="checkbox"/>	SG280 RC-M G2	• Works with 2 hydraulic lines, pressure/pressure (grapple open/close). • Integrated wireless control. • Wireless control with pushbuttons that can be installed in joystick.
<input type="checkbox"/>	SG220 A G2	• Works with 2 hydraulic lines, pressure/pressure (grapple open/close). • Electric wire on the crane boom. • Pushbuttons that can be installed in joystick.. • Incl. collecting unit (multi-tree handling).
<input type="checkbox"/>	SG280 A G2	• Works with 2 hydraulic lines, pressure/pressure (grapple open/close). • Electric wire on the crane boom. • Pushbuttons that can be installed in joystick.. • Incl. collecting unit (multi-tree handling).
<input type="checkbox"/>	SG220 A RC-M G2	• Works with 2 hydraulic lines, pressure/pressure (grapple open/close). • Integrated wireless control. • Wireless control with pushbuttons that can be installed in joystick.
<input type="checkbox"/>	SG280 A RC-M G2	• Works with 2 hydraulic lines, pressure/pressure (grapple open/close). • Integrated wireless control. • Wireless control with pushbuttons that can be installed in joystick. • Incl. collecting unit (multi-tree handling).

Notes

Contents

Model	2
Notes	2
Contents	3
We thank.....	5
Safety instructions	6
General safety instructions	6
Instructions for safe operation	7
Description of labels / Warning labels.....	8
Placement of labels on the product	9
Installation	10
Recommendations and tips	10
Contents of the delivery.....	11
<i>Radio control - handheld remote transmitter (RC-T)</i>	11
<i>Radio control - transmitter with separate pushbuttons (RC-M)</i>	12
<i>Radio control - transmitter with separate pushbuttons and collectin unit (A RC-M)</i>	12
<i>Cable control - without collecting unit</i>	13
<i>Cable control - with collecting unit (A)</i>	14
Basic installation instructions.....	15
Take in use - handheld remote (RC-T)	18
Take in use - remote with push buttons (RC-M) with or without collecting unit.....	20
Take in use - cable control with push buttons, with or without collecting unit (A)	22
Control with the cranes own remote	24
Use and Maintenance.....	27
Initial check before use	27
Check after first use.....	28
Daily use and maintenance	29
Service.....	29
Chain lubrication	29
Tensioning the drive belt.....	30
Check tension of the belt after tensioning or replacement.....	31
Tensioning the saw chain.....	32
Replacing saw bar and saw chain	33
Adjusting the speed of the saw bar.....	35
Lubrication points.....	36
Hydraulics.....	37
Valve set	37
Hydraulic schematic.....	38
Valve for collecting unit.....	39
Electronics	40
Electronics schematic	40
MRemote 1.0 logic	41
Technical data.....	42

Measurements SG220	43
Measurements SG280	44
Technical data - wireless control	45
Instructions for pairing transmitter to receiver	47
Warranty conditions	48
Declaration of conformity	49
Form - Warranty application	50

We thank

you for the confidence you've showed us in your choice of Mecanil SG220 or Mecanil SG280 grapple saw.

The Mecanil SG220 and SG280 grapple saw is a grapple suitable for felling of trees and branches on sensitive areas such as in park areas, near power lines and other similar areas. The grapple saw also works well to fell eg. energy wood. The grapple does not require any additional hydraulic hoses and no auxiliary valves on the crane boom. The grapple is also easy to install and it works with a small oil flow.

By using the product in a suitable manner and with regular maintenance it will serve you for many years.

Read the instructions carefully!

Even if you have experience with this type of product, we recommend that you read our instructions carefully to familiarize yourself with the product. The instructions contain information that is essential for safety and efficiency, but also for the factory warranty to apply. When receiving your purchased product, check that there are no shipping and transport damages on your product. If there should be any damages or if parts are missing, contact your dealer immediately.

It is the user's obligation to familiarize him/herself with the use of the product and to follow the instructions carefully. It is the responsibility of the user to make sure that the mounting and connections between the grapple and crane are designed and adapted to handle the loads and strains of the grapple with a safety margin. It is the responsibility of the user to ensure, for example, that the vehicle has the necessary capacity to handle the use of grapple saw.

Mecanil Oy Ab reserves the right to change equipment and maintenance instructions as well as data without prior information.

Summary!

1. Read the instruction.
2. Follow the instructions and contact your dealer if necessary.
3. Make sure the crane and hydraulic system are capable of handling a grapple saw.
4. Lubricate and service the grapple as mentioned in the instructions.
5. Have a professional repair any possible damages (even small ones) immediately.
6. Always work in a calm and foreseeing manner.

Take special note of all warnings, considerations and notes contained in this manual, which are marked with the following mark in the manual:



Manufacturer: Mecanil Oy Ab, Riksvägen 565, 07880 Liljendal, FINLAND

Safety instructions

General safety instructions

-  Read the manual carefully before using the crane.
-  Familiarize yourself with the functions and usage of the grapple saw.
-  Be especially careful when connecting and disconnecting the grapple saw to the crane or machine.
-  Extreme caution should always be exercised when using the grapple saw.
-  Make absolutely sure that no one is within a dangerous distance of the working grapple saw.
-  The operator must always have a clear oversight of the work area.
-  Never insert your hand or any other body part into the machine assembly or under hanging load during work or when the hydraulic system is active (pressurized).
-  Walking under a hanging load is always forbidden and the operator is not allowed to lift a load over people in any circumstances.
-  Do not overload the grapple saw.
-  Extraordinary caution should be taken when working near electrical lines or other sensitive areas. Keep the safety distances. Expect risk of unforeseen movements. Any local guidelines and regulations for working near power lines must always be followed.
-  When working in cold or especially freezing temperatures, all movements should first be performed carefully to soften seals in the cylinders and valves.
-  Never let an outside person handle the grapple saw / machine, before you make sure that this person has understood all operating and safety instructions.
-  Always shut down the machine for maintenance, service and repairs. Care should always be taken when servicing, servicing and repairs.
-  The tilt function is equipped with a shock valve to prevent overloading the cylinders and other breakage.
-  The cylinder for the grapple claws is equipped with a load holding valve.

Instructions for safe operation

-  It is strictly forbidden to be inside of the risk zone of the grapple saw or crane.
-  Extraordinary caution should be taken when working near electrical lines or other sensitive areas. Keep the safety distances. Expect risk of unforeseen movements. Any local guidelines and regulations for working near power lines must always be followed. Var ytterst försiktig när du kopplar gripsågen till och från kranen eller maskinen.
-  The operator must always have a clear oversight of the work area.
-  Never insert your hand or any other body part into the machine assembly or under hanging load during work or when the hydraulic system is active (pressurized).
-  Walking under a hanging load is always forbidden and the operator is not allowed to lift a load over people in any circumstances.
-  Localize any problem before any mending attempts, this will prevent unnecessary work and possibly worsening the situation.
-  The grapple saws hydraulic hoses and pipes must always be kept in good condition. Replace any of these immediately when any weakening is detected, especially the ones connected to the grapple claws. Inspections are to be done daily. Air in the hydraulic system can cause unforeseen movements, so always "bleed" the system by driving the cylinder end-to-end several times after replacing any part of the hydraulic circuit.
-  Use original parts, by using original parts will ensure a more problem free use of the product. Also note that if a failure is a result of not using original parts, the user assumes all risk.
-  Never let an outside person handle the grapple saw / machine, before you make sure that this person has understood all operating and safety instructions.
-  Always use appropriate safety gear, like helmet, safety goggles etc.
-  The cylinder for the grapple claws is equipped with a load holding valve.
Leave the holding valve installed, when the grapple saw will be used for taking down trees in pieces. (knuckle boom cranes, truck cranes, tele-handlers or similar).
The valve prevents the the grapple from opening (and dropping the load) in case of a hose break.
Uninstall the valve, if the grapple saw will be used to fell whole trees that will be cut at ground level. (Forestry harvesters, forwarders, excavators or similar).

Description of labels / Warning labels

Labels and warning symbols on the grapple



Warning for risk of crushing

Be aware of the risk of being crushed by the grapple arms, tilt function and other moving parts on the grapple. Negligence may lead to severe or fatal injuries.



Warning for the saw

Be aware of the risk of the saw. The machine must always be turned off before doing any maintenance, service or repairs on the grapple saw. Negligence may lead to severe or fatal injuries.

Other labels that also relate to the use of the grapple saw



Risk zone 50 m (50 yards).

The grapple saw also inherits all possible warnings that applies to the machine and/or crane it's installed on
Eg. bigger risk zone.


Make sure you always have a clear view of the working area. Negligence may lead to severe or fatal injuries.



Usage of safety gear

Always use appropriate safety gear to avoid injuries during your work.


Placement of labels on the product

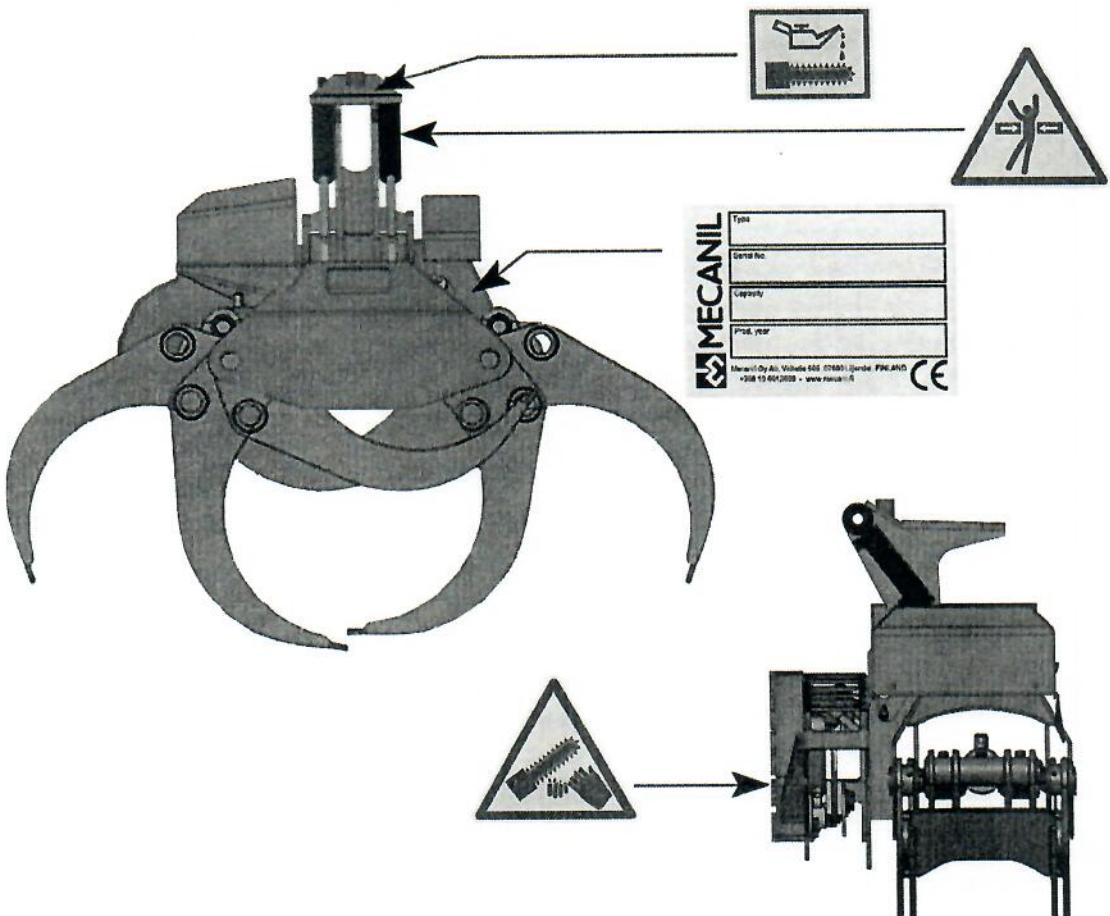

Crush risk




Saw warning

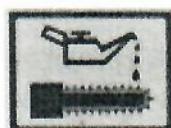

Chain lubrication oil

The label indicates where to fill lubrication oil.

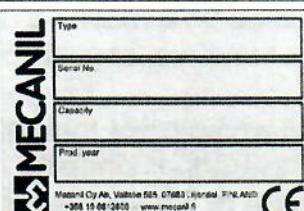

Serial number badge

Information: Model, serial number, capacity and year of production.

Installation

Recommendations and tips

There are some recommendations and tips to consider when installing the grapple saw. The grapple saw can perform slightly different depending on the machine which it is mounted on.

Both the SG220 and SG280 grapple saw work very well on trucks with long cranes. The SG220 and SG280 with radio control are popular, because no power cable needs be installed along the crane boom. Only 2 hydraulic lines are needed (grapple open & Grapple close)

Note! No bleed line (from saw motor) needed.

**SG220 and SG280 are to be mounted free hanging, with a rotator and link.
Fixed mounting is not allowed.**

We recommend a minimum of ½" hydraulic lines along the boom.

If quick connectors are used for the hydraulic lines, use one size bigger connectors in comparison to the hose size.

NOTE! No bleed line (from saw motor) needed..

If the hydraulic hoses are too small the saw will feel slow and counter (back) pressure will rise. The counter pressure should not exceed 50 bar (725 PSIs).

**SG220 and SG280 can be installed on a variety;
Trucks, forwarders, excavators etc.**

These recommendations should be noted especially when installing the grapple saw on a crane with a long boom. For example on a crane with a reach of 20-35 m (60 -120 ft), eg. knuckle boom cranes, telehandlers or similar.

When installing on shorter cranes small smaller lines will probably suffice.

The recommended oil flow for SG220 is approx. 50-80 l/min. (13 - 20 gpm).

The recommended oil flow for SG280 is approx. 60-100 l/min. (15-26 gpm).

The grapple saw will also work with less oil flow (eg. 40l/min.[10gpm]), but the saw will then work slower.

NOTE! Load holding valve on the grapple cylinder:

Leave the valve installed, when the grapple saw is installed on a machine meant for taking down a tree in smaller pieces. (Mobile cranes, tele handlers, knuckle boom cranes or similar)

Uninstall the valve, if the grapple saw will be used to fell whole trees that will be cut at ground level. (Forestry harvesters, forwarders, excavators or similar).

The machine must always be shut down when servicein or doing maintenance work on the grapple saw!

Open-center valve for grapple function.

For the chain lubrication pump to work as supposed, the pressure must be relieved from the hydraulic circuit for the grapple function. This may be achieved by using a "open-center" valve (on the cranes valve set), meaning that oil can freely flow in or out when no function is activated. Relieving pressure will allow the pump to reset and fill with lubrication oil and again administer it when the saw function is initiated next time.

Keep Grapple close function initiated while using tilt up, tilt down or saw functions. This produces oil pressure to the grapple saw. Tilt up and tilt down functions will also work with keeping grapple open function activated.

NOTE!

All machines are different.

Different machines have different hydraulic pressure and flow.

Please contact the dealer or manufacturer for more information.

Contents of the delivery

Radio control - handheld remote transmitter (RC-T)

1 pc.
grapple saw
(SG220 or
SG280)

Hydraulic hoses for
grapple open /
grapple close

Grapple close ><
Grapple open <>



Transmitter



2 pcs. batteries



1 pc. battery
charger



If the grapple saw is ordered with rotator and link, the delivery will also include bolts for installation as well as hydraulic fittings for the grapple hoses to rotator.

Radio control - transmitter with separate pushbuttons (RC-M)

1 pc.
grapple saw
(SG220 or
SG280)

Hydraulic hoses for
grapple open /
grapple close

Grapple close ><
Grapple open <>

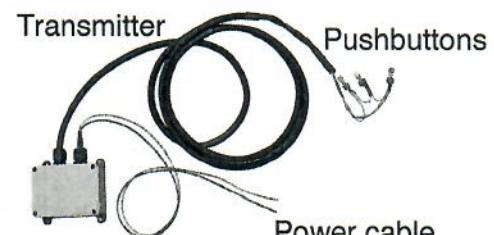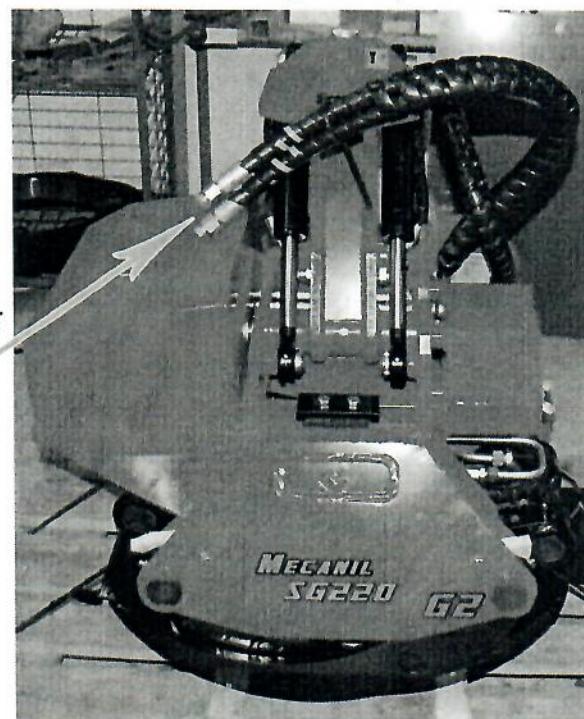

Power cable



2 pcs. batteries



1 pc. battery
charger


If the grapple saw is ordered with rotator and link, the delivery will also include bolts for installation as well as hydraulic fittings for the grapple hoses to rotator.

Radio control - transmitter with separate pushbuttons and collectin unit (A RC-M)


1 pc.
grapple saw
(SG220 or
SG280)



Transmitter
Hydraulic hoses for grapple open / close.
Grapple close >< Grapple open <>

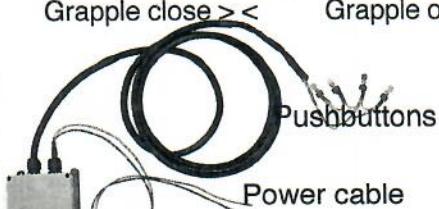


2 pcs. batteries

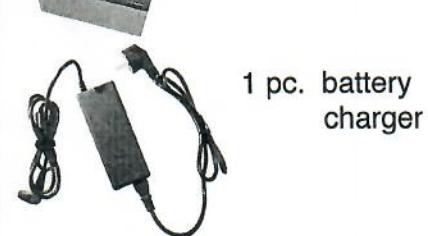


1 pc. battery
charger

If the grapple saw is ordered with rotator and link, the delivery will also include bolts for installation as well as hydraulic fittings for the grapple hoses to rotator.

Cable control - without collecting unit

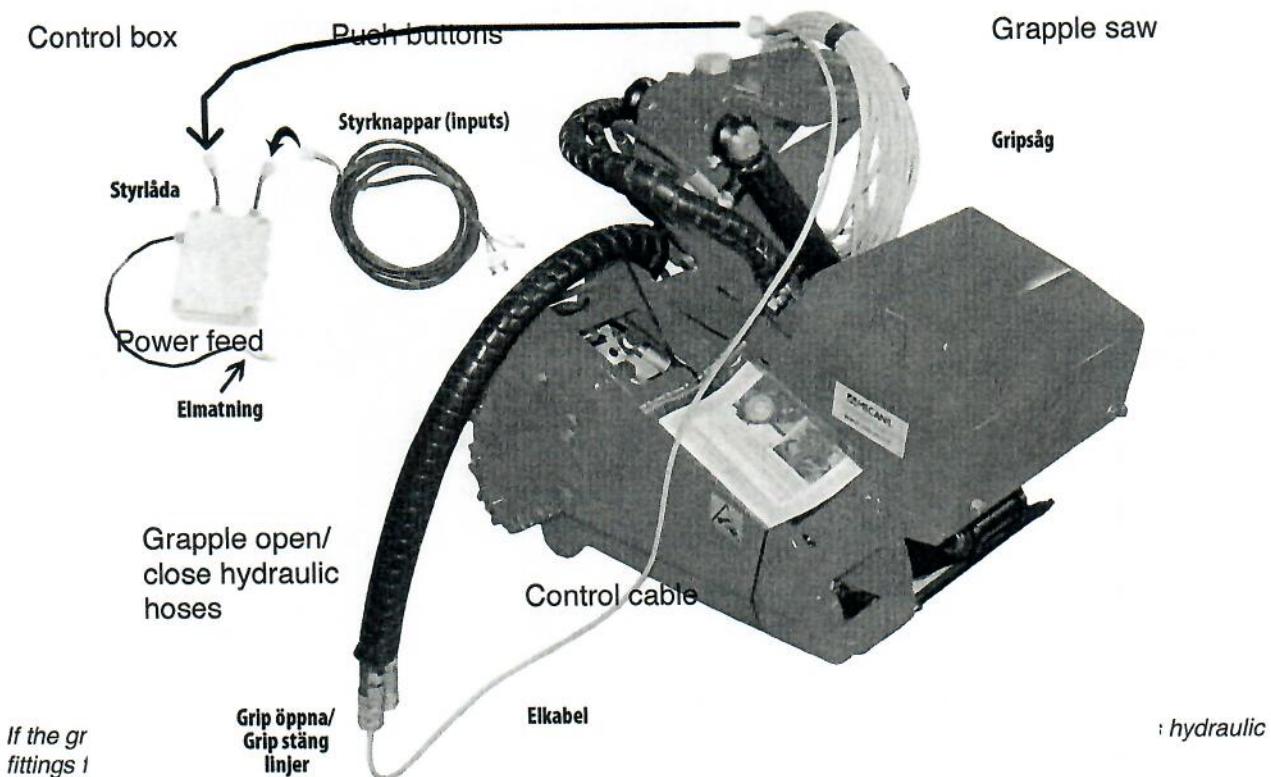

Cable control - with collecting unit (A)

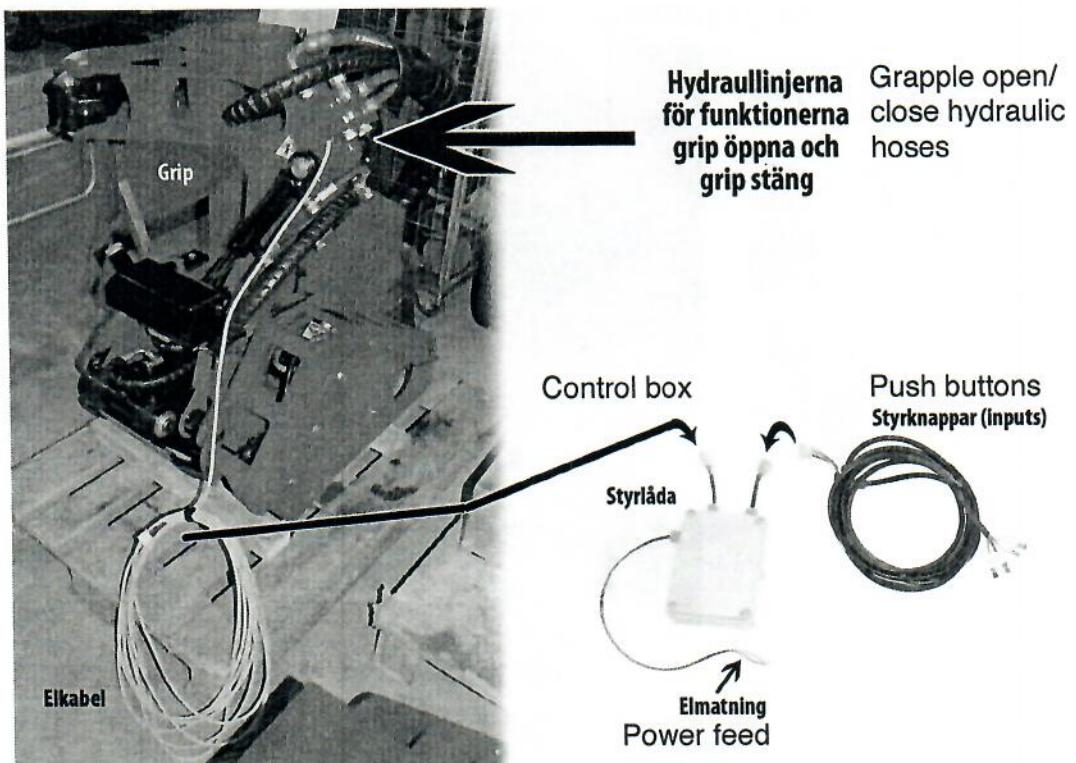

If the grapple saw is ordered with rotator and link, the delivery will also include bolts for installation as well as hydraulic fittings for the grapple hoses to rotator.

Basic installation instructions

Installation may vary depending on what type of machine it is installed on, all machines are different.

Please contact the dealer or manufacturer for more information.



**NOTE! TAKE EXTREME CAUTION WHILE INSTALLING THE UNIT,
AS THERE IS EVIDENT RISK FOR GETTING CRUSHED.
MAKE ABSOLUTELY SURE THAT THE MACHINE IS TURNED OFF DURING THE
INSTALLATION!**

Install the grapple saw at the tip of the crane. Mounting plate for rotator: 173/6 (6 bolts).

Use rotator and link.

If a rotator with axle is used.


An adapter flange needs to be used between the rotator and the grapple saw.

NOTE!

Recommendation: use 1/2" hoses to the grapple saw, to ensure enough oil flow to the grapple saw. (approx 50-80 l/min.). This may apply especially when the unit is installed on a machine with a long boom. (eg. a truck crane, knuckle boom crane).

It also helps to install 1/2" hoses close to the tip of the crane slangar kranen.

Eg. if the crane has a JIB, the JIB can have bigger hoses.

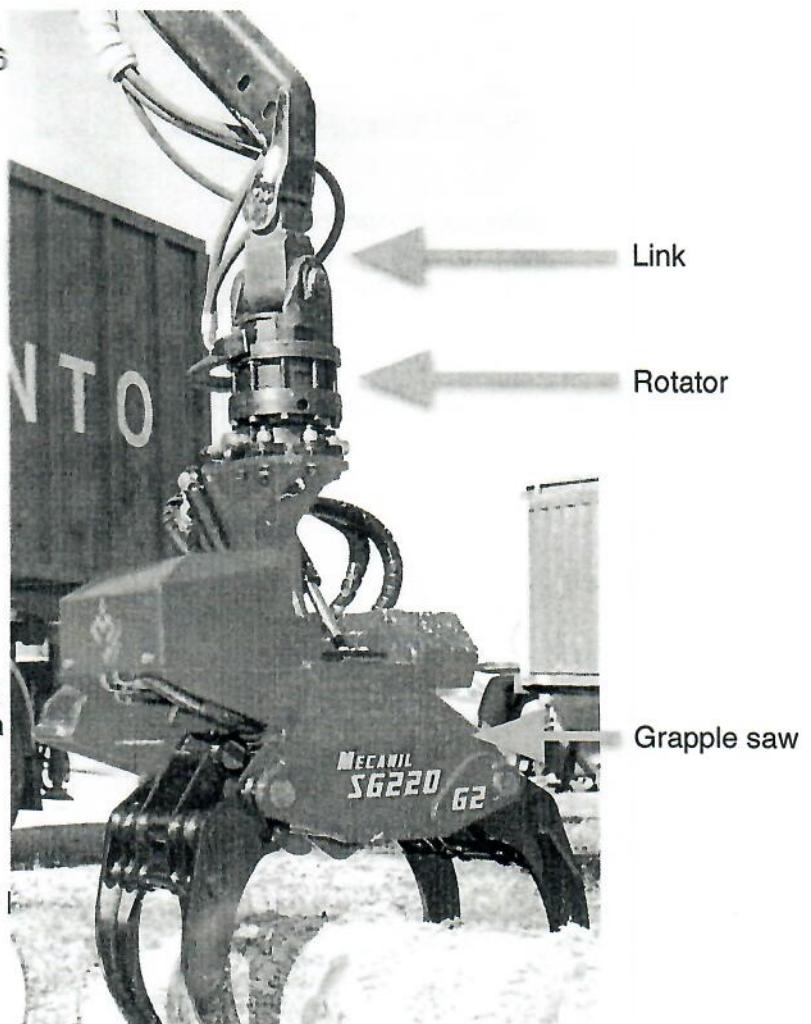

The grapple saw will also work with less oil flow but the saw will run slower.

If fast connectors are used on the hydraulic hoses, use one dimension bigger connectors in comparison to the hoses, as fast connectors often restrict oil flow significantly.

Rotator

SG220 or SG280 with radio control:

To allow free endless) rotation for the grapple saw you need a rotator with the option of channeling the oil for grapple open / close through the axle of the rotator.

In other cases the hydraulic lines can be installed to bypass the rotator.


Grapple open/
close hydraulic
hoses



SG220 or SG280 with cable control:

Use a hydraulic hose to shield the control cable. Hose size approx. 1/2"-3/4".


Preferably bundle the grapples open and close hydraulic hoses together with the shield-hose for the control cable, **bypassing the rotator.**

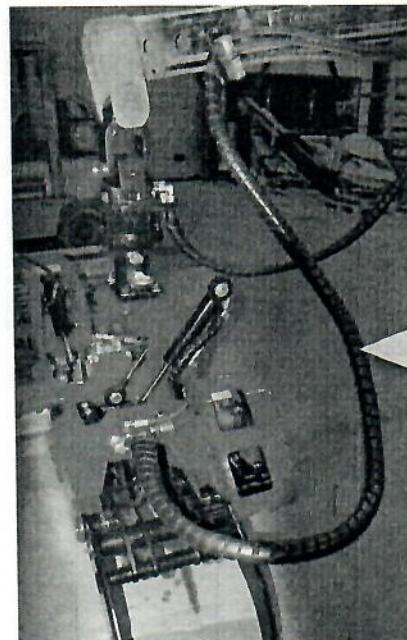

Note!

Make sure the channels through the rotator are big enough to ensure the needed oil flow to the grapple saw.

The fittings for the grapple functions may also be connected from the bottom of the rotator (depending on the rotator model).

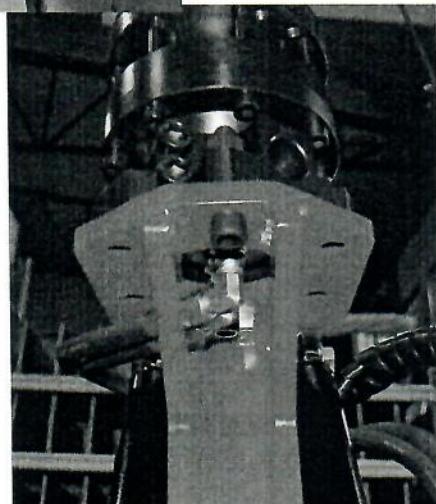

SG220 or SG280 with cable control:


Install the control cable to the cabin.

Make a junction for the cable on one or several points along the boom.


This can be done in many ways depending on what kind of base machine the grapple saw is installed on.

This is to prevent the need to change the whole cable if a break were to occur.
Some examples.


Example 1:

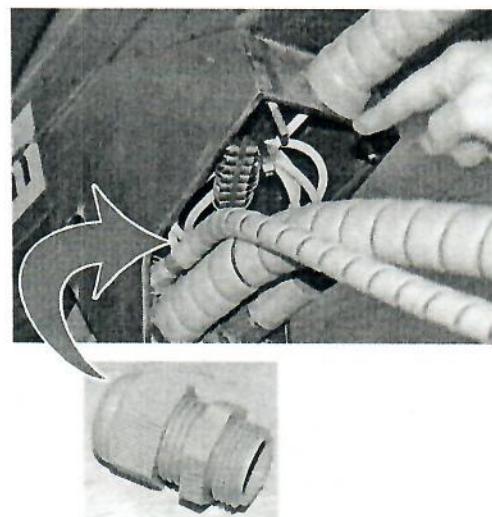

Example 2:

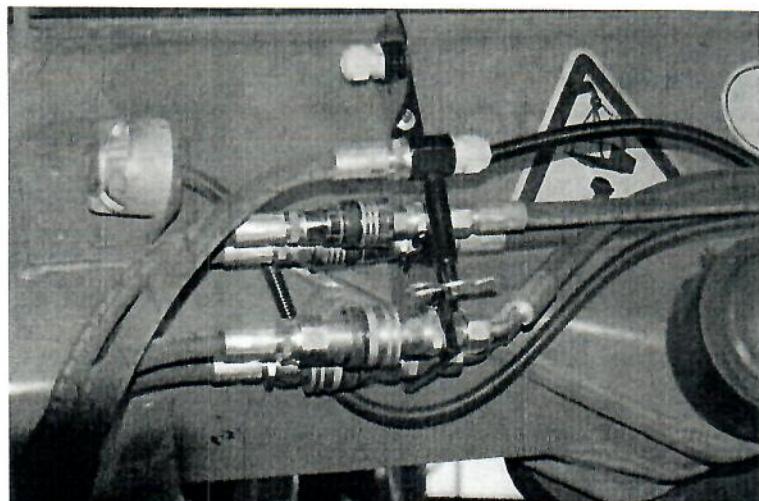

Example 3:

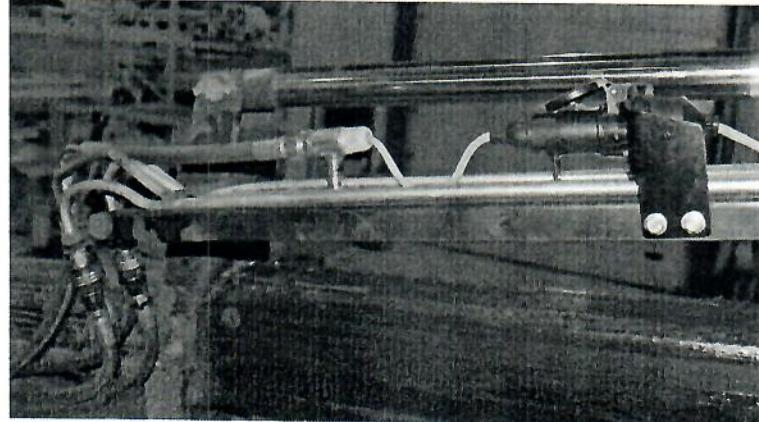

Take in use - handheld remote (RC-T)

NOTE! Read page 27 (inspection before use) before using the product.

Remote - buttons

Functions:

- 1. Tilt up**
- 2. Tilt down**
- 3. Saw**



Grapple open / close functions are activated via the cranes integrated controls.

Keep the grapples close function activated while using the grapple saws functions. This produces hydraulic pressure to the circuit.

Charging the battery:

The delivery contains two batteries and one 110-240 V battery charger for the grapple saw.

If you wish to charge the batteries in the machine (12V or 24V) an inverter needs to be used.

**The batteries are LiFePO4 batteries and need a smart-charger to be charged.
Ask your dealer for more information.**

When the battery is empty, disconnect it to prevent damages to the battery. (The battery will usually get empty very suddenly).

For example, even if it's the end of your work day when the battery runs out, do not leave it connected. As the grapple saw's electrical system still is active and could deep-discharge the battery. Deep-discharging a LiFePo4 battery may destroy the cells indefinitely.



Controlling the grapple saw by remote safely:

SG220 RC-T and SG280 RC-T is controlled only by the remote.

No additional control box is to be installed.

Example:

Install a small plate to the side of the crane's remote, where the grapple saw's remote can be placed. The grapple open / close functions are controlled by the original control for the crane.

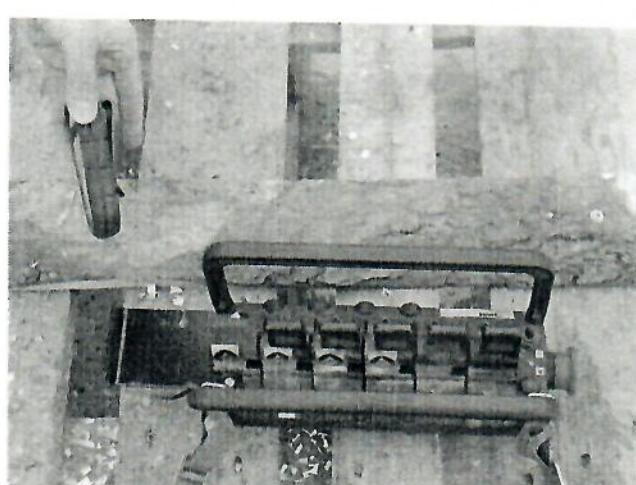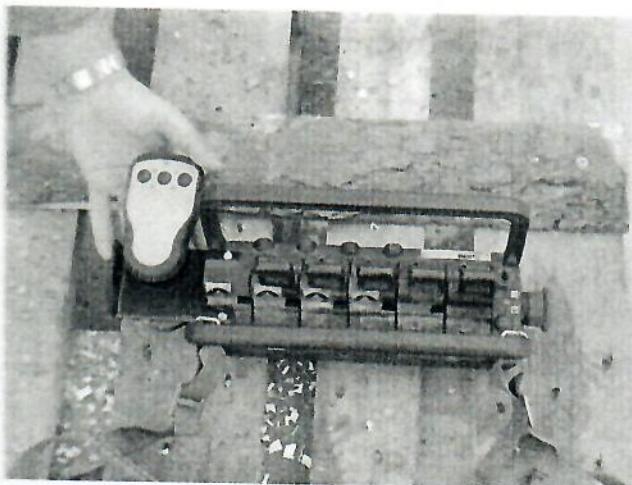


Take in use - remote with push buttons (RC-M) with or without collecting unit

NOTE! Read page 27 (inspection before use) before using the product.

Pushbuttons - Functions:




Bla = Tilt up (brown cable)

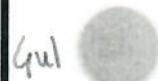

Gul = Tilt down (yellow cable)



Red = Saw (purple cable)

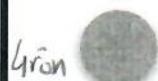

Grön = Collecting unit (green cable)

The grapple open / close functions are controlled by the original integrated controls.

Keep the grapple's close function activated to use the units other functions, this build hydraulic pressure in the circuit. Grapple open function will also allow the tilt up and down functions to run. For safety reasons, the saw will only run with grapple close function activated.

Charging the battery:

The shipment includes two batteries and on 110-240V charger for the remote.

If one wishes to charge the battery from a 12V or 24V system the charger needs to be connected to an appropriate inverter.

The batteries are based on LiFePo4 technology and always need to be charged with a smart charger meant for LiFePo4 batteries with an appropriate Ampere feed. Ask your dealer or the manufacturer for more information.

When the battery runs out disconnect the the battery to prevent any damages to the battery. The battery will run out very abruptly, as it's electronically controlled by a circuit that will disconnect the load when charge gets too low.

For example, even if it's the end of your work day when the battery runs out, do not leave it connected. As the grapple saw's electrical system still is active and could deep-discharge the battery. Deep-discharging a LiFePo4 battery may destroy the cells indefinitely.

Controlling the grapple saw by separate push buttons:


SG220 RC-M, SG220 A RC-M, SG280 RC-M och SG280 A RC-M are controlled by push buttons that are connected to the transmitter.

Grapple open / close functions are controlled by the original integrated buttons.

Install the transmitter on a suitable place in the cabin (not inside any box, for radio functionality). For example on the back of the seat. From here it's easy to install the pushbuttons where you wish.

Install the pushbuttons by your own preference.

Example:

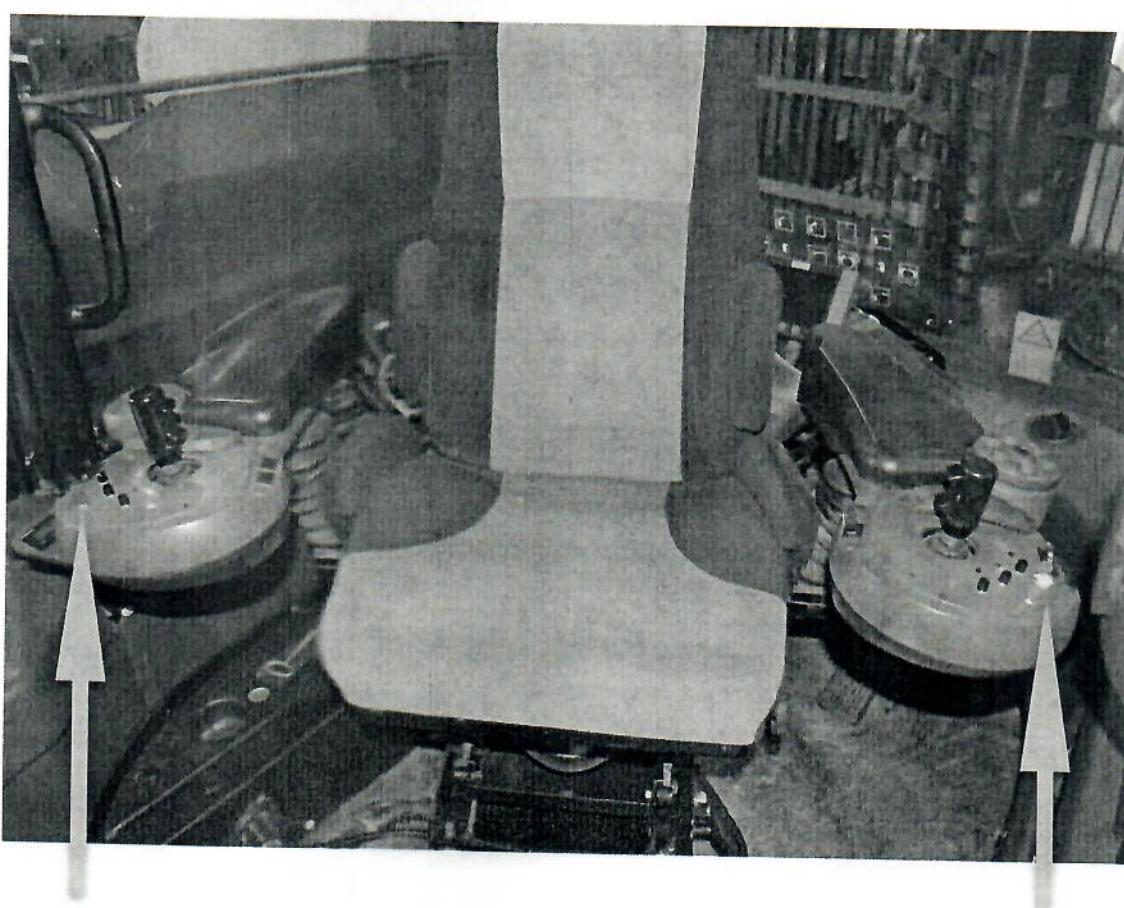

Saw

Tilt up, tilt down
and
collecting unit

Connect the power feed to the transmitter. 12V or 24V.

Red cable +

Black cable -

Take in use - cable control with push buttons, with or without collecting unit (A)

NOTE! Read page 27 (inspection before use) before using the product.

Pushbuttons - Functions:

Bla		= Tilt up	(brown cable)
bla		= Tilt down	(yellow cable)
bla		= Saw	(purple cable)
bla		= Collecting unit	(green cable)

The grapple open / close functions are controlled by the original integrated controls.

Keep the grapple's close function activated to use the units other functions, this build hydraulic pressure in the circuit. Grapple open function will also allow the tilt up and down functions to run. For safety reasons, the saw will only run with grapple close function activated.

Styrning av grip med separata styrknappar:


SG220, SG220 A, SG280 och SG280 A styrs med separata knappar som är kopplade till en styrbox som följer med gripsågen.

Grapple open / close functions are controlled by the original integrated buttons.


Install the transmitter on a suitable place in the cabin (not inside any box, for radio functionality).

For example on the back of the seat. From here it's easy to install the pushbuttons where you wish.

Install the pushbuttons by your own preference.

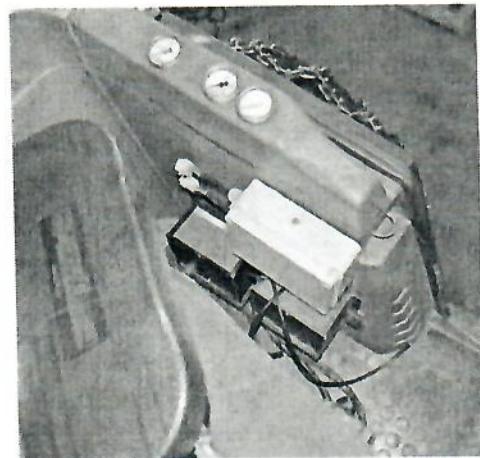

Example:

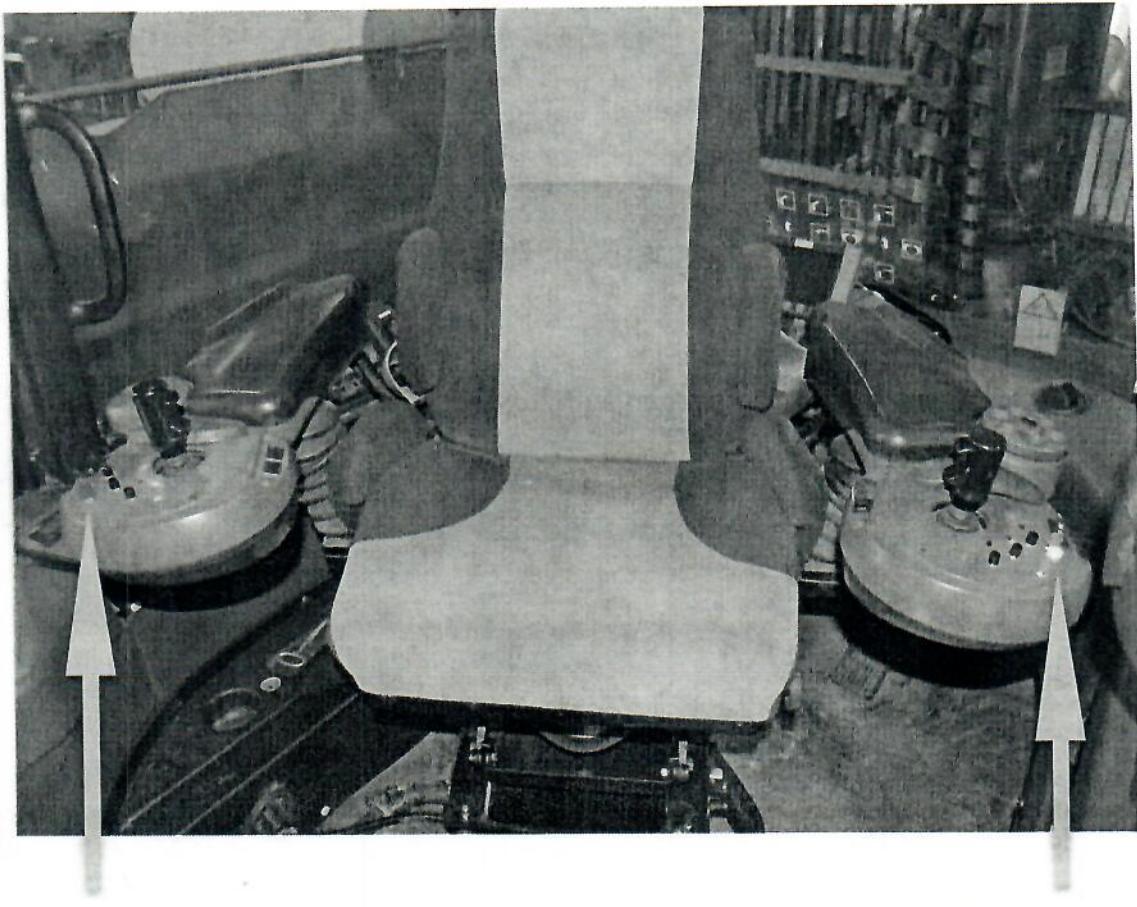

Saw

Connect power to the control box.

Red cable +

Yellow cable -


Tilt up, tilt down
and
collecting unit

Control with the cranes own remote


This is an example of installation with use of the cranes own remote control.

NOTE! This type of installation may not be possible on all machines or cranes. Installation may vary depending on the machine. This is an example.

Oversight

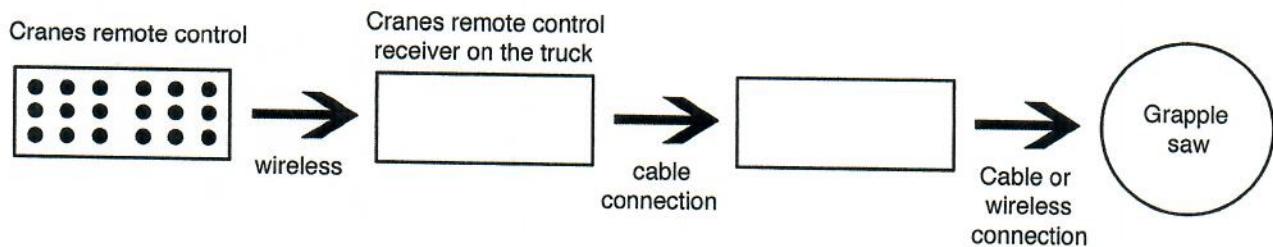

Mecanil SG220 or SG280

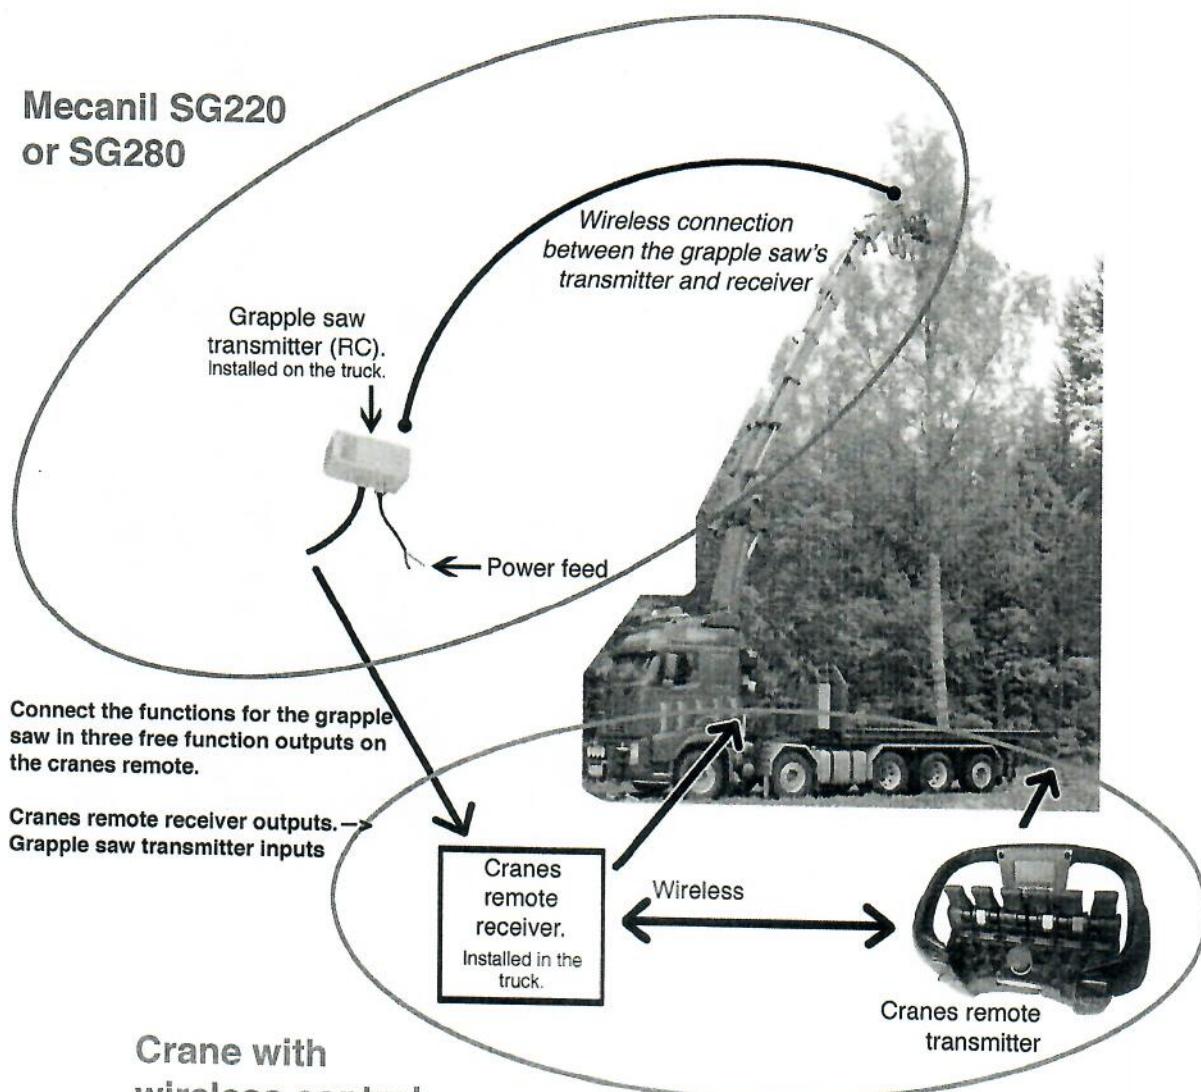

Crane with wireless control

Crane: Palfinger 72002 Performance
Scanreco P2

Cranes


remote:

1. Make sure you have sufficiently free channels to use on the remote. The SG220/280 needs 3 channels.
2. For tilt up/down functions usually a self-centering paddle switch is used. For saw function a push button is usually used. We do recommend that two hands need to be used for activation the saw function.

Chart for Scanreco P2 remote control:

(Schematics can be requested from the dealer or manufacturer of your own crane and remote.

Connections under the main connector

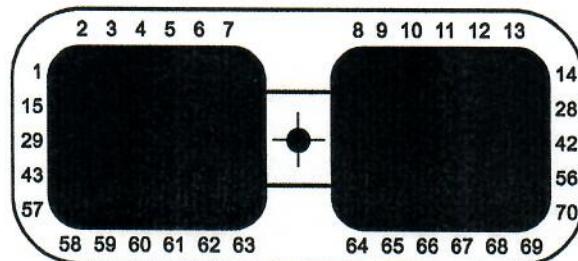

		Pin	Connection	
Cable 5 x 2,5 mm ²	Red	59	+	Feed
	Blue	57	-	Feed
	Green	43	115	Power supply
	White	44	114	Manual
	Brown	58	113	Radio
Jumper 1,5 mm ² svart	45	Jumper 1,5 mm ² svart		46
	48			47

Switches, digital on/off

		Pin	Connection	Switch Transm.
Kabel 12 x 0,75 mm ²	Vit	34	57 throttle +/-	D-UT 1 S1
	Brun	19	50 Motor Start	D-UT 2 S2
	Grön	33	51 Motor Stop	D-UT 3
	Gul	18	52 Free	D-UT 4
	Grå	32	56 Free (work lights)	D-UT 5
	Rosa	35	60 AOS manual	D-UT 6
	Blå	17	61 Free	D-UT 7
	Röd	31	62 Free	D-UT 8
	Svart	16	2 receiver	D-UT 9
	Violett	30	53 (OLP)	D-UT 10 and CAN-Bus
	Grå/Rosa	15	58 (PJKSL)	D-UT 11
	Röd/Blå	29	59 (PJKSL)	D-UT 12

- According to the table switches S4, S5 och S8 are free.
- Check which switch is connected to which button on the remote receiver on the truck.
- Then connect the right output on the receiver to the right input on the SG220/280 transmitter.
- See next page.

SG220 or SG280 with wireless control:

Connect as instructed below.

RC-M versions

Inputs:


Channel 1: Tilt up (blue button and brown cable)

Channel 2: Tilt down (yellow button and yellow cable)

Channel 3: Saw (red button and purple cable)

Channel 4: Collecting unit (green button and green cable)

See electronic schematic for more details.

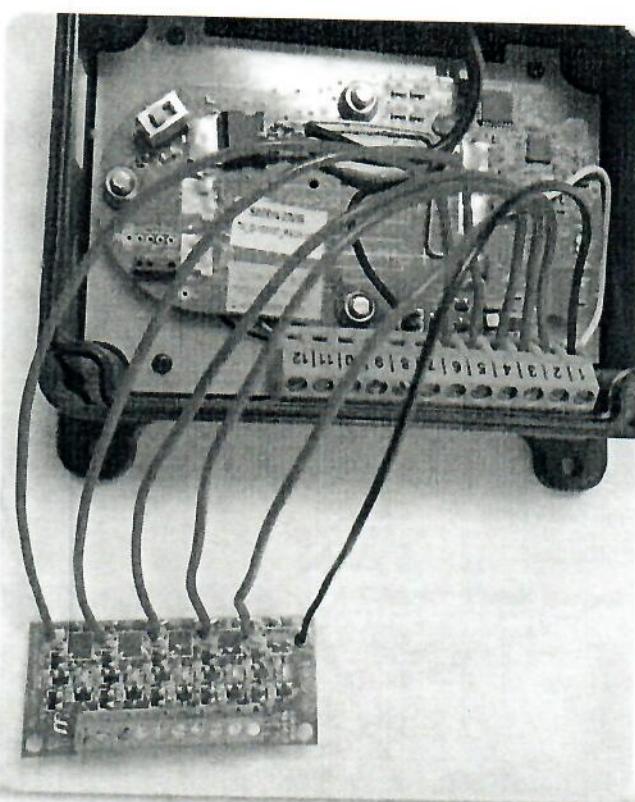
For connection to integrate into cranes remote**SG220 or SG280 :**

Any input can be assigned to any channel on the transmitter, as long as it's grouped to the same common connector (1 or 7).

Example of channels 1-5 getting the activation input from an external signal. The signal can be 9-40 Volts. The circuit board emulates activated button when there is an active input signal.

Inputs on the button emulator are meant to be connected by two wires each, so both positive and negative.

These inputs are polarity-independent, so you will not have to pay attention to if + or - goes in the right screw connector. However the channels are to be kept separate.

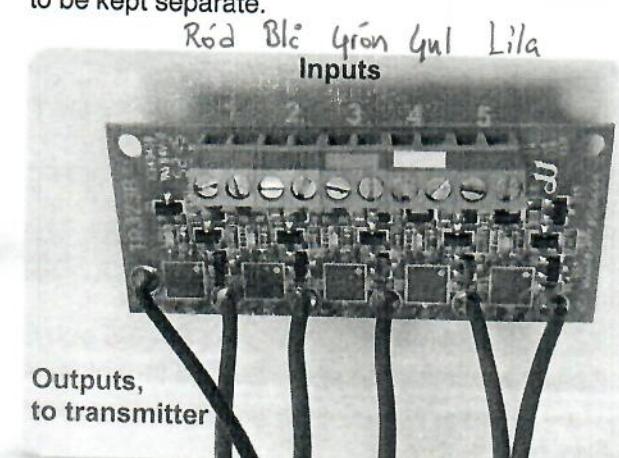

Use and Maintenance

Initial check before use


NOTE! Load holding valve on the grapple cylinder:

Leave the valve installed, when the grapple saw is installed on a machine meant for taking down a tree in smaller pieces. (tele handlers, knuckle boom cranes or similar)

Uninstall the valve, if the grapple saw will be used to fell whole trees that will be cut at ground level. (Forestry harvesters, forwarders, excavators or similar).


The machine must always be shut down when servicein or doing maintenance work on the grapple saw!

- Check that the hoses between the cranes tipp and the garpple are of right length. The hoses can not be too long as they may e.g. get underneath the grapple. The hoses can not be too short as the grapple may not have sufficient moving capabilities.
- Keep a safe distance to the grapple saw att all times.
- Open and close the grapple several times to make sure any air comes out of the hydraulic system.
- Keep the grapple close function activated and then activate the saw function several times.
- Do some very small trial cuts on a tree in a safe place to get familiar with the actions and overall functionality with the grapple saw. Keep a safe distance!
- If something seems to not funktion properly, turn off the machine and contact your dealer.
- When you're doing your initial cuts, start with very small pieces approx. 20". After this you can gradually extend the pieces up to approximately 5 ft. While the pieces get bigger pay attention the weight distribution and how the grapple reacts to the different pieces.
- We recommend that the pieces do not exceed about 5 ft. in length. A good rule of thumb can be to not cut bigger pieces than that the tip of the crane reaches the top of the tree to be cut. This applies to the use when cutting trees in pieces from top and downward (when installed on mobile cranes, knuckle boom cranes, tele-handlers etc.).

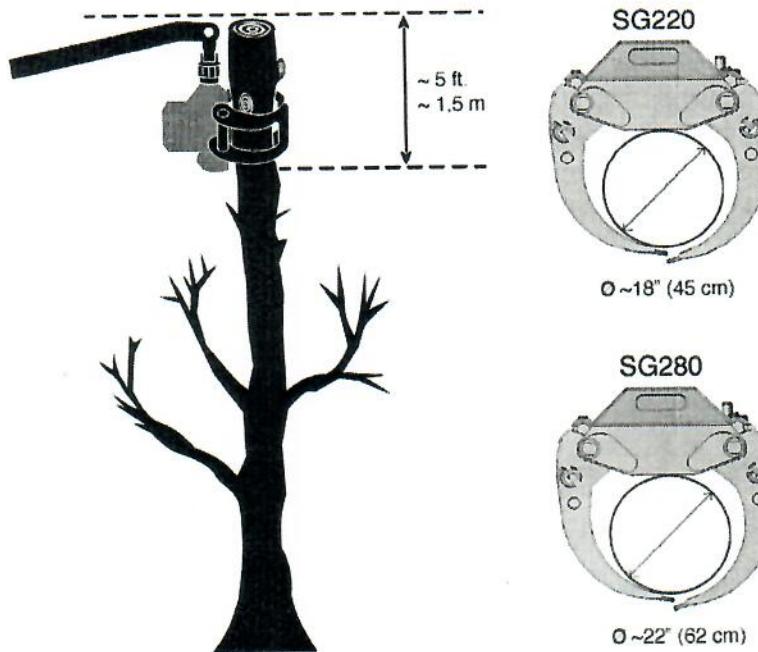

Check after first use**ATTENTION**

Check after 1-8 hours of use. Make sure the drive belt is tight, if it's loose it must be tensioned.

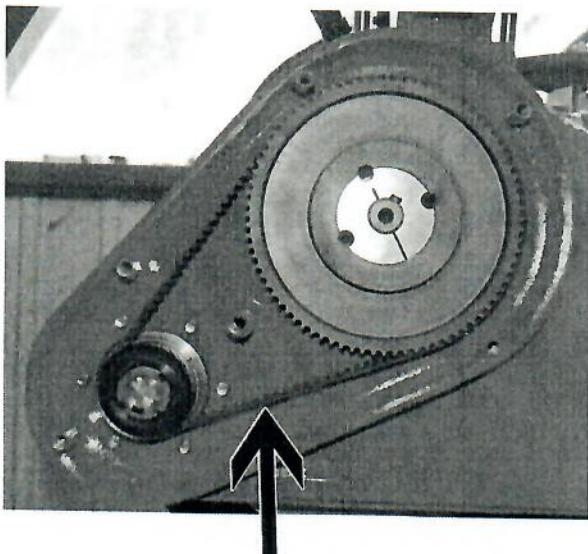

If the grapple saw is used while the drive belt is loose, the belt may be worn out in just a few days.

See how to tension the belt on pages 30-31.

Make sure all hydraulic fittings and hoses are tight, to prevent oil leaks. Also check tension on all bolts for the linkage from crane to grapple (rotator).

Daily use and maintenance**NOTE**

The machine must alway be turned off during any service or maintenance.
Always take caution while servicing and maintaining your product.

The Grapple saw must be lubricated every 8 hours. See lubrication points on page 36.
NOTE! The saw bar attachments lubrication is intended to be within 80-100h intervals.

Check that all hoses and fittings are tightly fastened.

Check rotator bolts' tightness.

Check saw chain tension.

Check drive belt tension.

Check for oil leaks, any damaged hoses or pipes must be replaced before use.

Check that the tilt unit's damping plate is intact. Do not use the Grapple saw without the damping plate as this may cause damage.

Fill cahin lubrication oil in the tank if needed. The oil tank volume is approx. 2,5 l (0.65 US gal).

Service may only be done by an authorized person.

Use original parts.

Contact your dealer for more information on service and parts.

Service

Service anad maintenance must be performed regularly to ensure a problem free and economic use of the grapple saw.




If any repair would need welding on the grapple saw, contact your dealer beforehand for instructions. Welding done wrong may comprimize the integrity of the structure.

Chain lubrication


Fill chain lubrication oil in the tank if needed.
The oil tank volume is approx. 2,5 l (0.65 US gal).

This symbol is visible on the unit.
It indicates where to fill lubrication oil.
The tank is integrated in the tilt unit.

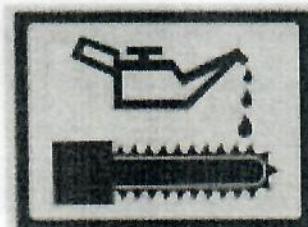


Tensioning the drive belt

Losen the bolts for the saw motor (qty. 2)
Marked with green arrows.

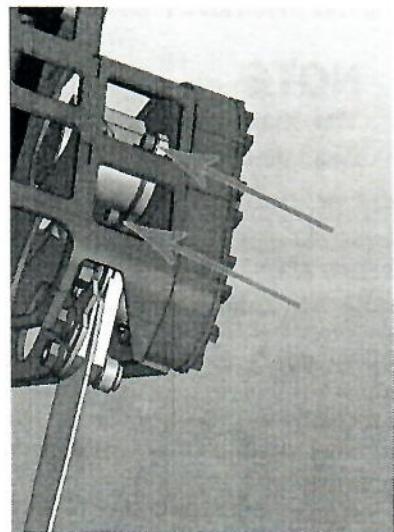

Tension the belt by tightening the indicated nut just inside the saw cassette.

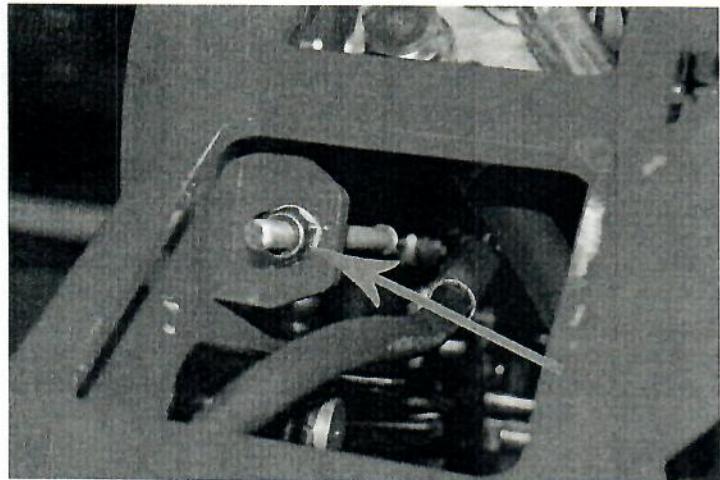


Check that the tension is correct.
Se next page.


Check tension of the belt after tensioning or replacement

Example:

The belt should be possible to move about ca 5 mm (1/4") in both directions (total 1/2") when you try moving it quite firmly.

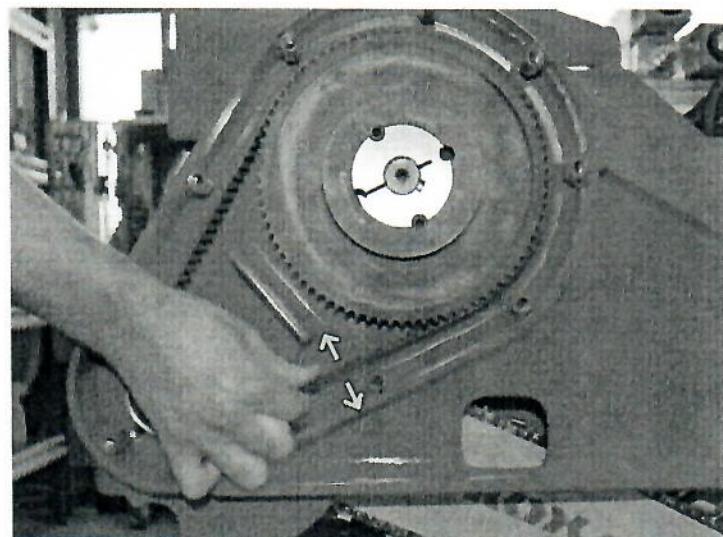

Another way to check the tension is to try to turn the belt 90°. This should be possible but only with a very firm hand.

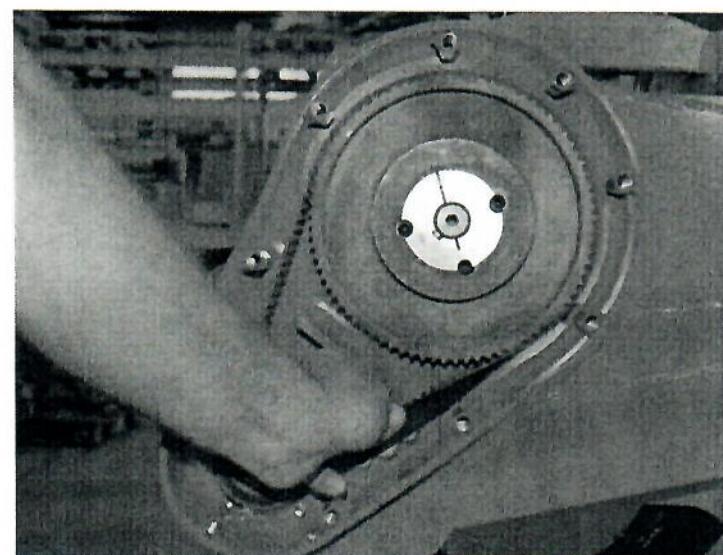


You should also be able to turn the bigger belt wheel (may be very heavy when the chain is tight).





Tensioning the saw chain

Tensioning the chain by eccentric movement.

Loosen the two nuts.

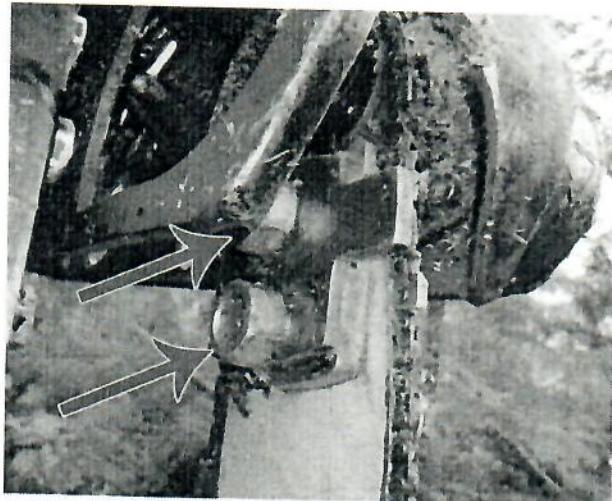

Tension the chain by hand, this should be enough. Alternatively the same wrench which fits the nuts will fit the tensioner also.

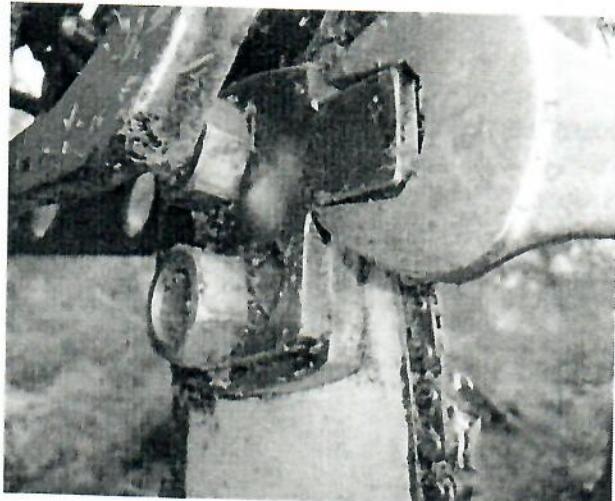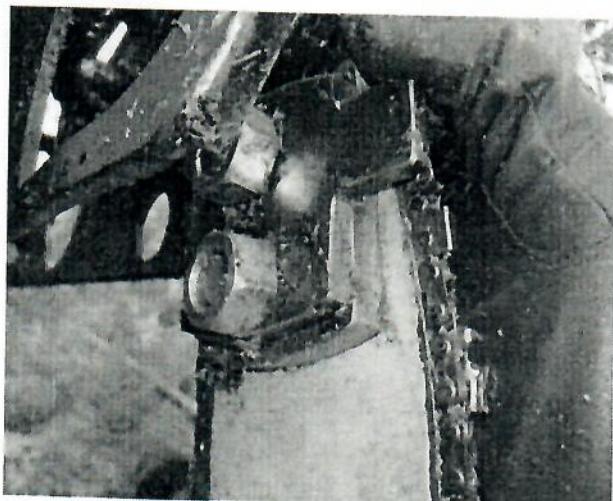



Replacing saw bar and saw chain

Taking saw bar and chain off

1. Loosen the two nuts that hold the saw bar in place. Loosen the chain.



2. Wedge a tool between the bar and chain on the under side and turn the nut of the pulley upward.

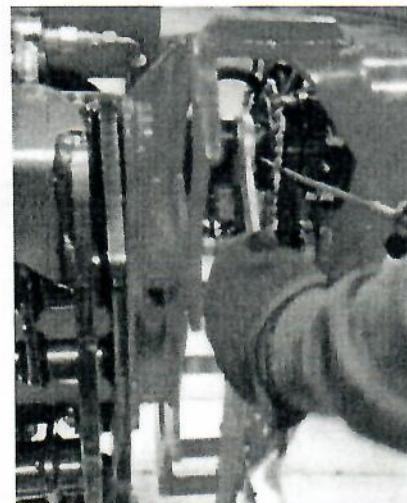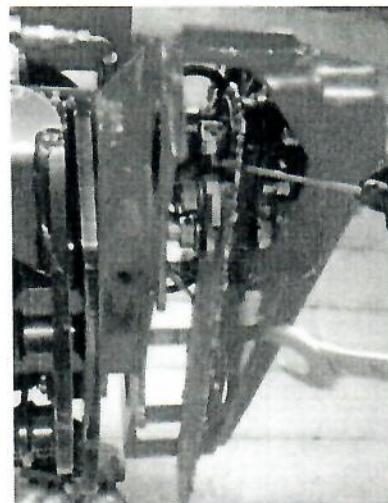


3. The chain releases from the pulley, remove the chain.




4. Loosen the nuts for the saw bar further (if necessary). See that the two pins from the chain tensioner are outside the saw bar and pull off the saw bar.

Install new saw bar and saw chain

1. Insert a new saw bar.
2. Put a new saw chain on the saw bar an pulley. Start by putting the chain on the top half of the saw bar and then on about half of the pulley.

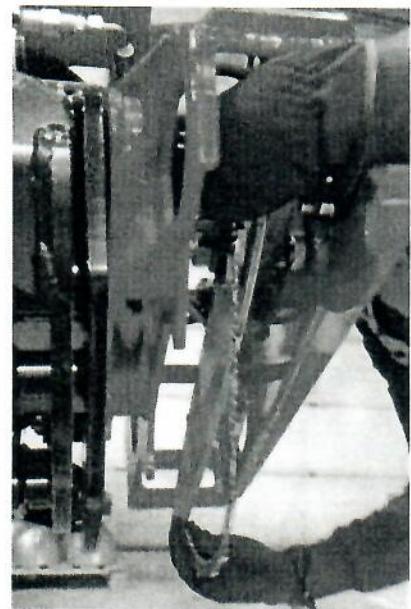

3. Then turn the nut for the pulley downward until the chain is on.
4. Tighten the two nuts for the saw bar.

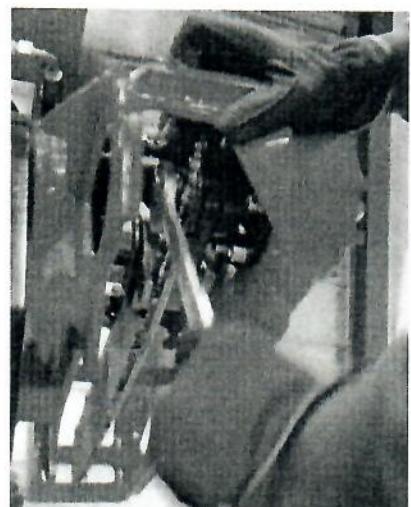

5. Finally tension the chain as mentioned on page 32.


Adjusting the speed of the saw bar

Lowering the speed = turn the valve in (clockwise).
Raising the speed = turn the valve out (counter clockwise).





When turning the valve inward, the oil to the cylinder is restricted which slows down the saw bar.

NOTE!

If the saw bar comes out too fast, reduce the speed to prevent damage to the saw motor.

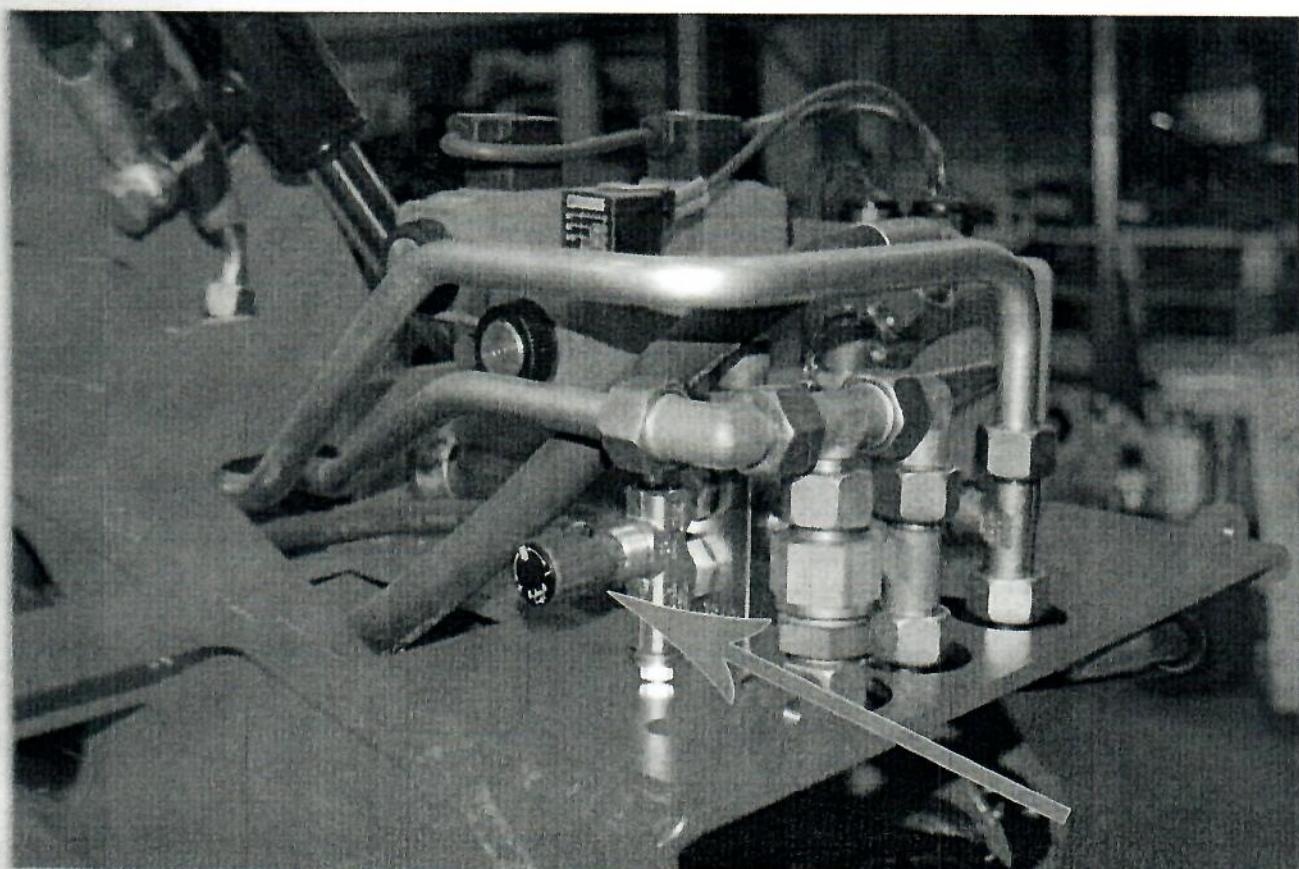


Lubrication points

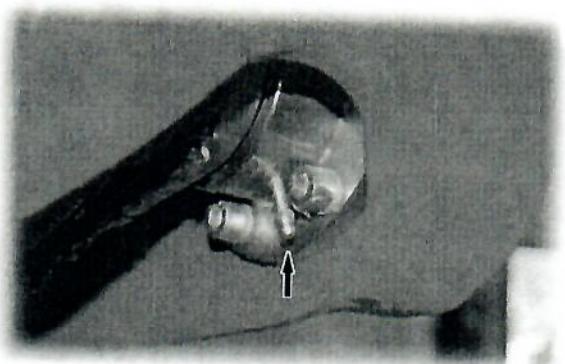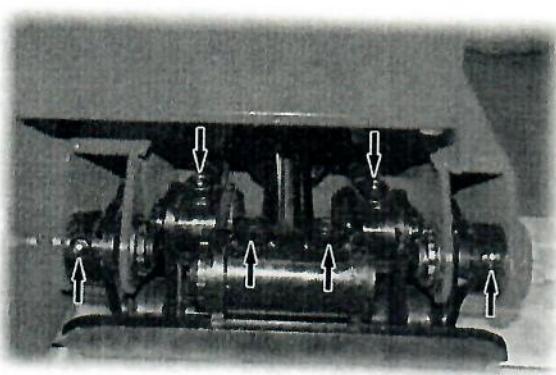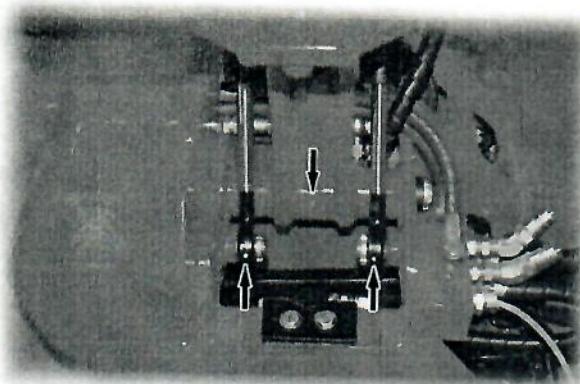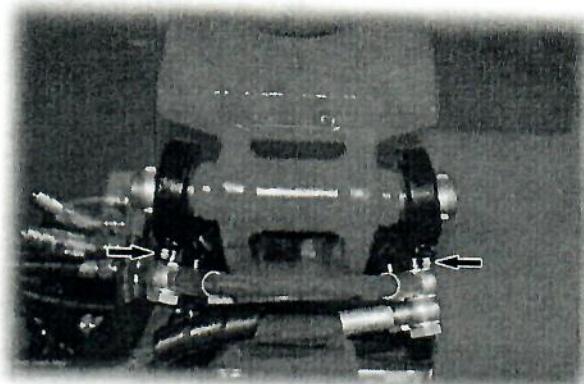







Lubricate the saw bar attachment in 80-100 h intervals.

Lubrication points on the collecting unit:

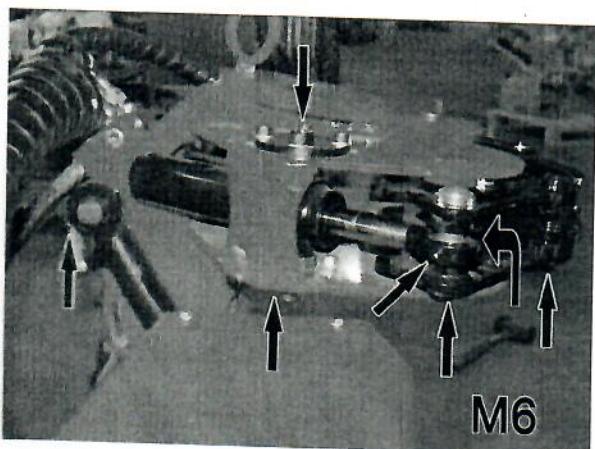







Hydraulics

Valve set

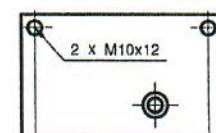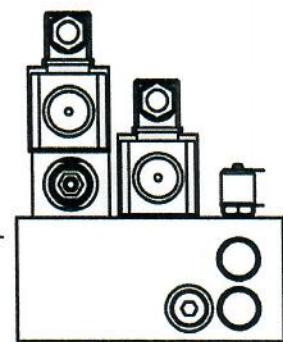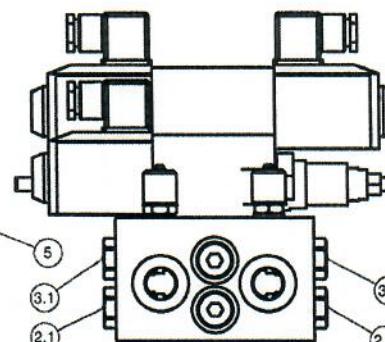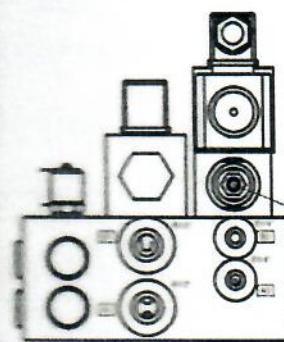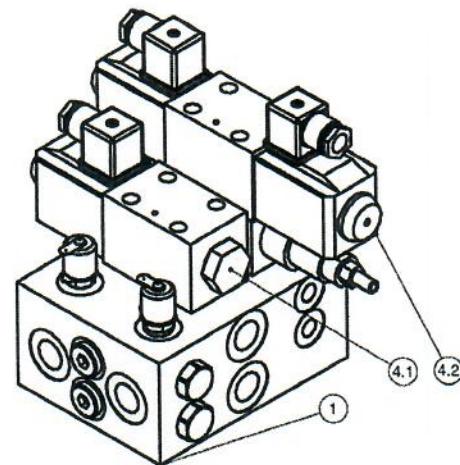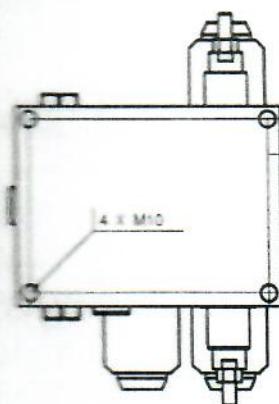

No.	Description	qty
1	Valve block	1
2	Checkvalve	2
3	Checkvalve	2
4	Directional valve	2
5	Double pressure restriction valve	2
6	Pressure measurement	2
7	Restrictor	1

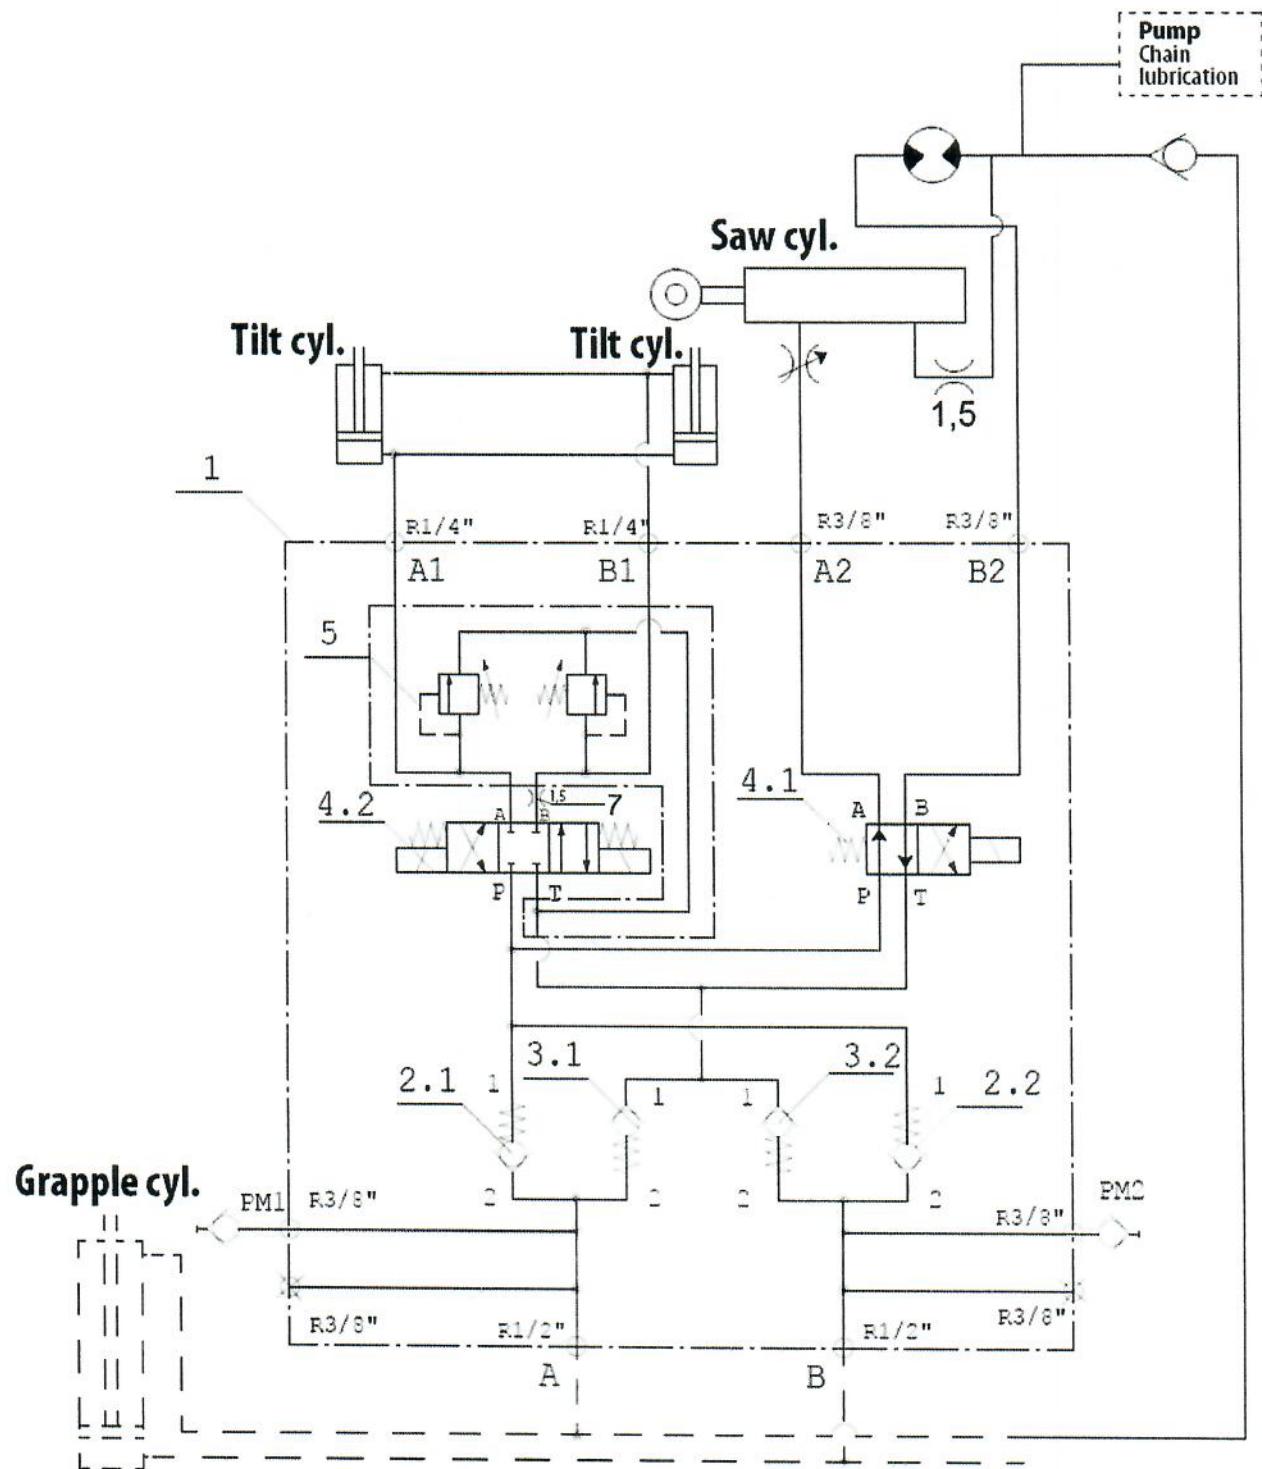Hydraulic schematic

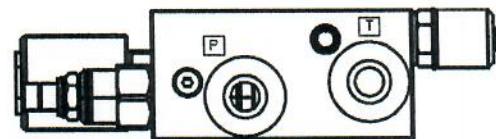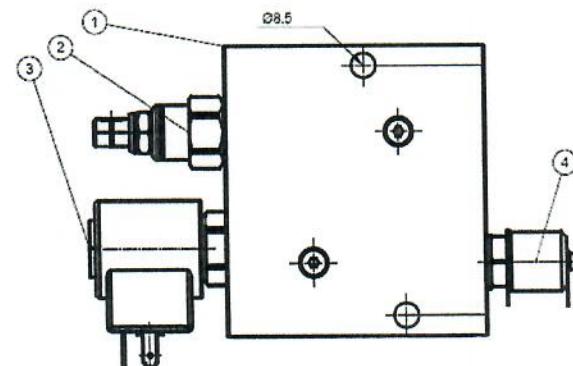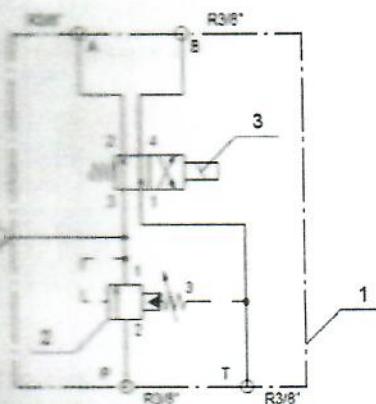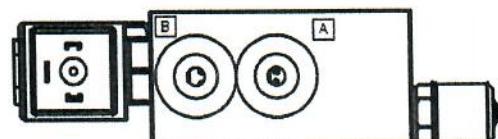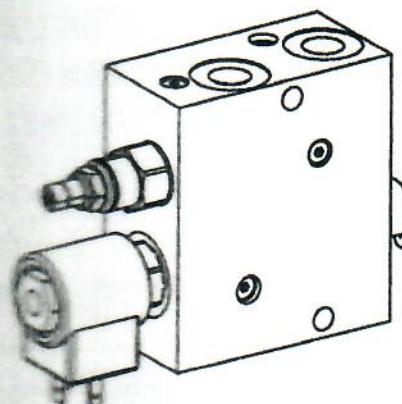
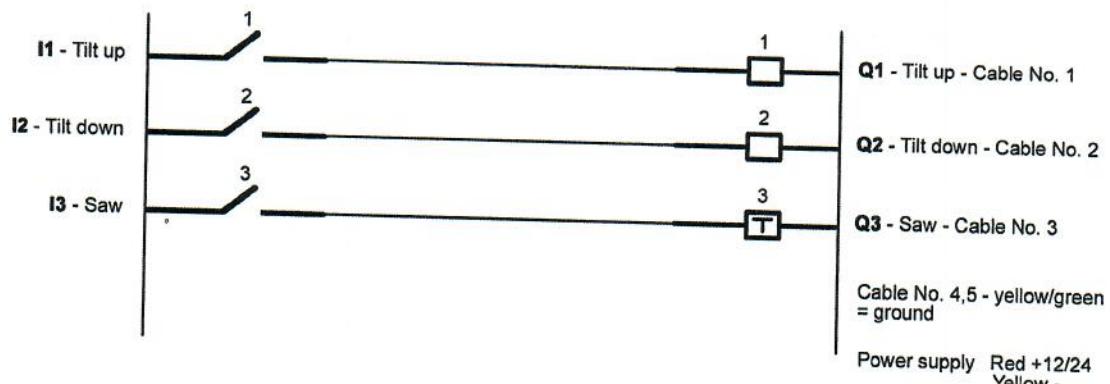
Valve for collecting unit


No.	Description	Qty
1	Valve block	1
2	Pressure reduction valve	1
3	Directional valve	1
4	Pressure measurement	1
5	Solenoid	1


Electronics

Electronics schematic

SG220 G2 & SG280 G2 (cable control)
 SG220 RC-T G2 & SG280 RC-T G2 (handheld wireless remote)



SG220 A G2 & SG280 A G2 (cable control)

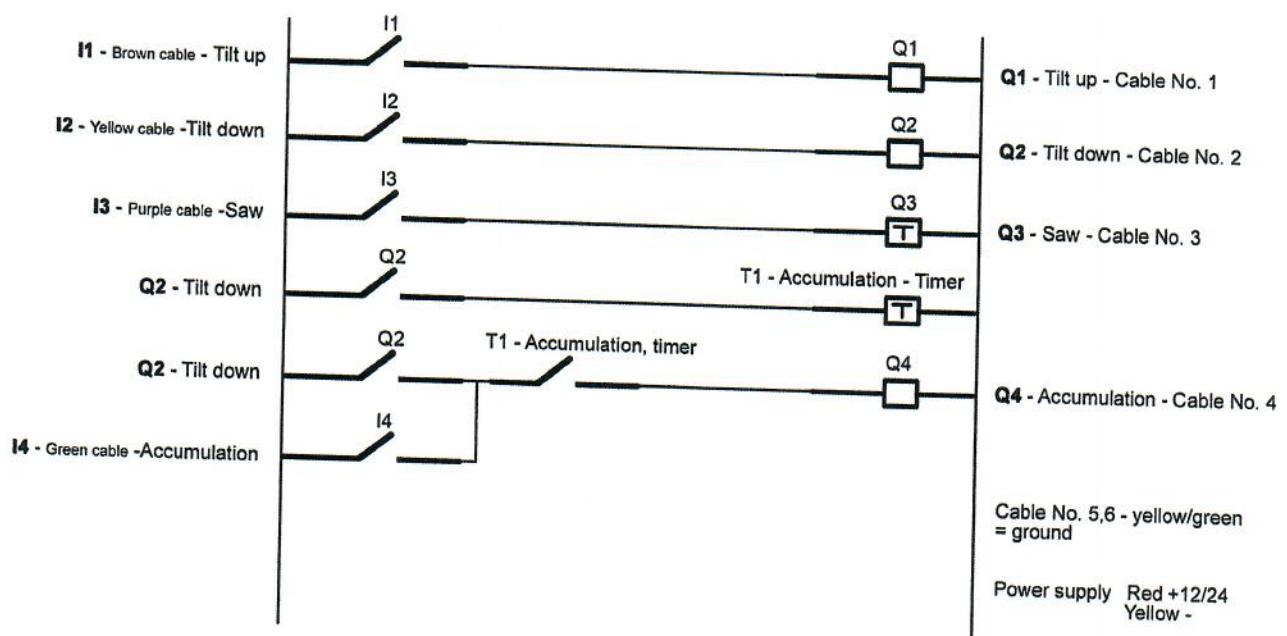

MRremote 1.0 logic

SG220 RC-M G2 & SG280 RC-M G2

SG220 A RC-M G2 & SG280 A RC-M G2

(wireless control with separate push buttons)

Wireless Transmitter

Ch.	Push-buttons	Cable color
1		Brown
2		Yellow
3		Purple
4		Green
5		
6		
7		
8		
9		
10		

Wireless Receiver

Receiver	cable	Activates functions:
1 (+)	1	Ch. 1
2 (+)	2	Ch. 2 + Ch. 4
3 (+)	3	Ch. 3
4 (+)	4	Ch. 4
5 (+)		Not in use
6 (+)		Not in use
7 (+)		Not in use
8 (+)		Not in use
9 (+)		Not in use
10 (+)		Not in use

Function
Tilt up
Tilt down
Saw
Collecting unit

Technical data


SG220

Model	SG220 G2	SG220 RC G2	SG220 A G2	SG220 A RC G2
Tilt	Yes	Yes	Yes	Yes
Collecting unit	No	No	Yes	Yes
Grapple size	0,22 m ²	0,22 m ²	0,22 m ²	0,22 m ²
Weight	310 kg	330 kg	370 kg	390 kg
Rec. oil pressure	180-230 bar	180-230 bar	180-230 bar	180-230 bar
Rec. oil flow	50-80 l/min.	50-80 l/min.	50-80 l/min.	50-80 l/min.
Rotator attachment	173/6	173/6	173/6	173/6
Hydraulics	2 lines (grapple open/close)	2 lines (grapple open/close)	2 lines (grapple open/close)	2 lines (grapple open/close)
Control	Cable 12V or 24V	Wireless control	Cable 12V or 24V	Wireless control
Biggest cut diameter (18")	ø 450 mm	ø 450 mm	ø 450 mm	ø 450 mm
Can be installed on	Trucks Tractors Forwarders Excavators	Trucks Tractors Forwarders Excavators	Trucks Tractors Forwarders Excavators	Trucks Tractors Forwarders Excavators


SG280

Model	SG280 G2	SG280 RC G2	SG280 A G2	SG280 A RC G2
Tilt	Yes	Yes	Yes	Yes
Collecting unit	No	No	Yes	Yes
Grapple size	0,30 m ²	0,30 m ²	0,30 m ²	0,30 m ²
Weight	370 kg	390 kg	430 kg	450 kg
Rec. work pressure	180-230 bar	180-230 bar	180-230 bar	180-230 bar
Rec. oil flow	60-100 l/min.	60-100 l/min.	60-100 l/min.	60-100 l/min.
Rotator attachment	173/6	173/6	173/6	173/6
Hydraulic	2 lines (grapple open/close)	2 lines (grapple open/close)	2 lines (grapple open/close)	2 lines (grapple open/close)
Control	Cable 12V or 24V	Wireless control	Cable 12V or 24V	Wireless control
Biggest cut diameter (22")	ø 550 mm	ø 550 mm	ø 550 mm	ø 550 mm
Biggest cut diameter (25")	ø 630 mm	ø 630 mm	ø 630 mm	ø 630 mm
Can be installed on	Trucks Tractors Forwarders Excavators	Trucks Tractors Forwarders Excavators	Trucks Tractors Forwarders Excavators	Trucks Tractors Forwarders Excavators

Measurements SG220

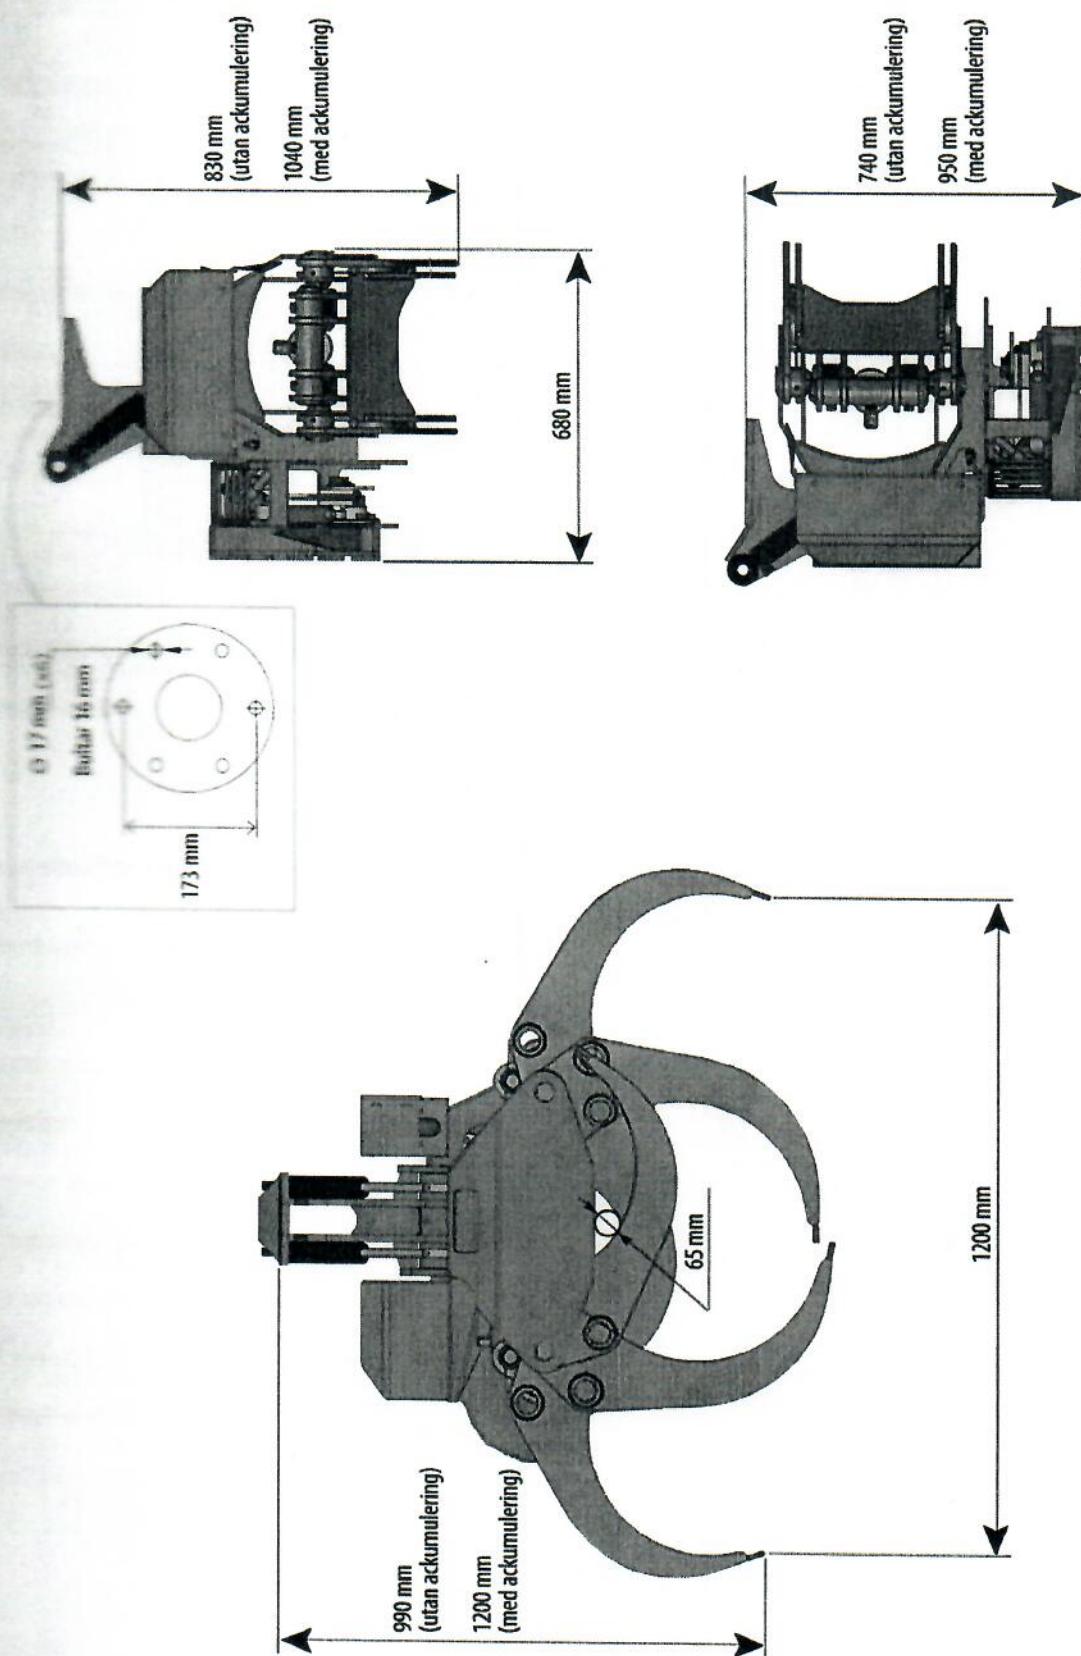


Measurements SG280

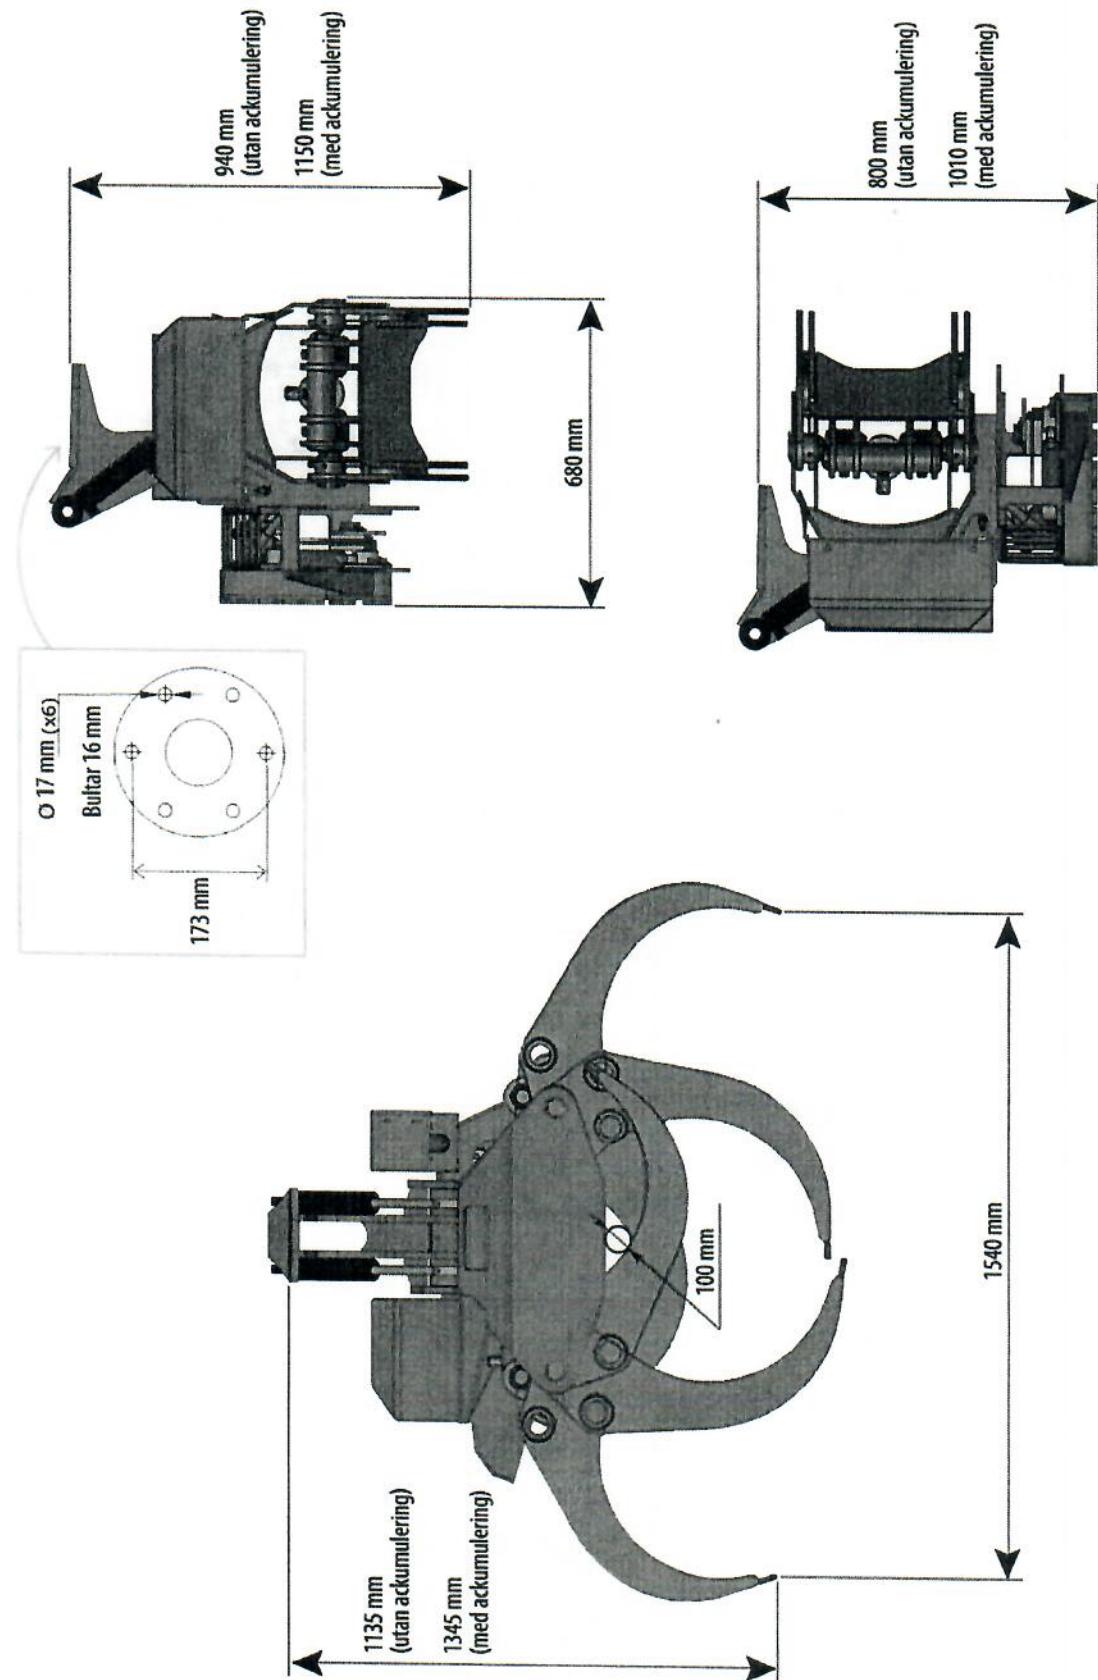

Technical data - wireless control

Transmitter - 3 buttons


Frequency	2,4 GHz, 16 channels
Code combinations	K 4.000.000.000
Buttons	3 x 1
Batteries	3
Batteries	exchangeable
Battery type	LR03 1.5V AAA
Weight	140 g / 0.3 lb
Measurements	65x112x35 mm / 2.6x4.4x1.4 tum
Encapsulation	IP67
Temperature	-20 to +55 °C / -4 to +130 F
On/off-switch	Yes

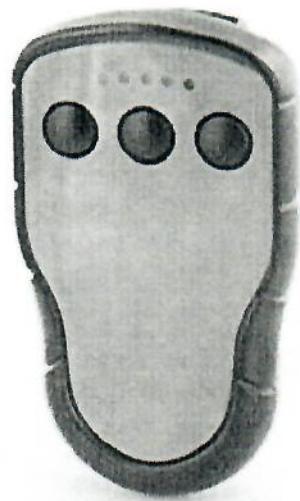

The picture is for illustrative purposes only, the actual product may differ from this.

Transmitter - separate pushbuttons


Frequency	2,4 GHz, 16 channels
Mod.type	FM-modulation
Radio type	PLL Synthesizer
Buttons	10 x 1
Power supply	12V/24V
Measurements	120x116x50 mm / 4.7x4.6x2 tum
Encapsulation	IP66
Temperature	-20 to +55 °C / -4 to +130 F
On/off-switch	Yes
Function	Customizable, up to 10 button input

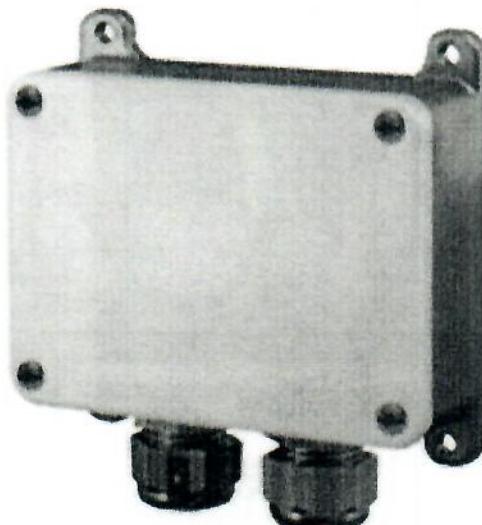

The picture is for illustrative purposes only, the actual product may differ from this.

Receiver

Frequency	2,4 GHz, 16 kanaler
Relays	5
Duplex	No
Power	12-24V DC
Measurements	120x116x50 mm / 4.7x4.6x2 tum
Encapsulation	IP66
Bus-system	None
Relay function	Momentary, Toggling, Interlocking/preset
Antenna	1 integrated
Temperature	-20 to +55 °C / -4 to +130 F

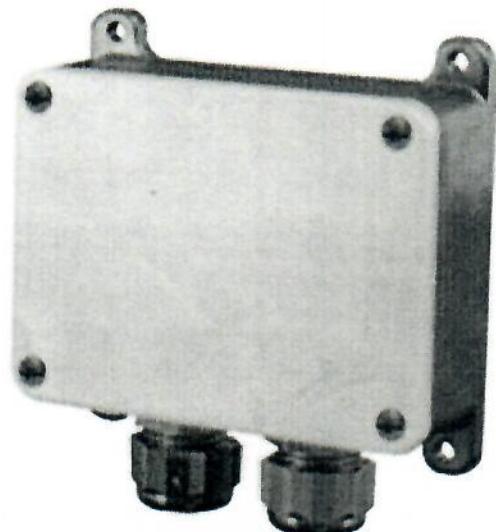


The picture is for illustrative purposes only, the actual product may differ from this.

Instructions for pairing transmitter to receiver**Transmitter**Start the transmitter


1. Start the transmitter by pressing any button.

Register the transmitter to the receiver


1. Press the "Function"-button on the receiver.
(the upper button "F").
Function LED shines red (LED 7).
2. Press the "Select"-button on the receiver.
(the lower button "S").
Alla relä-LED tänds röda.
3. Press and hold buttons 1 and 2 on the transmitter.
All relay LED's light up.
Keep the buttons pressed.
4. The relay LED's blink 3 times.
Release the buttons.
The pairing is done.

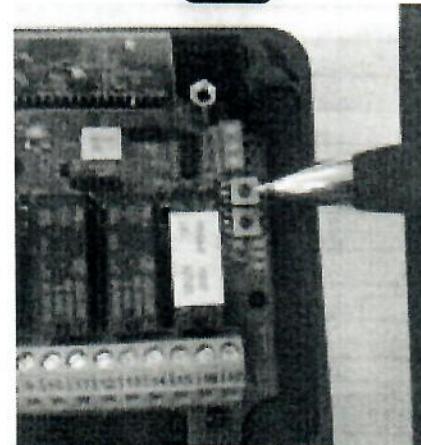Erase all transmitter from the receiver

1. Press the "Function"-button on the receiver.
(the upper button "F").
The function LED shines red.
2. Keep the "Select"-button pressed on the receiver.
(the lower button "S").
All relay LED's light up.
3. All relay LED's turn off.
Release the "Select"-button.
All transmitters are now erased from the memory.

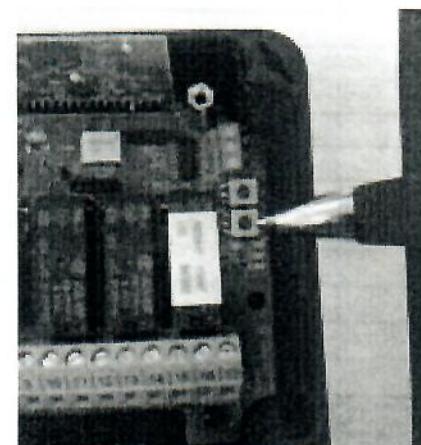

NOTE! If the "Function" LED on the receiver blinks red, one or more transmitters are paired to the receiver.

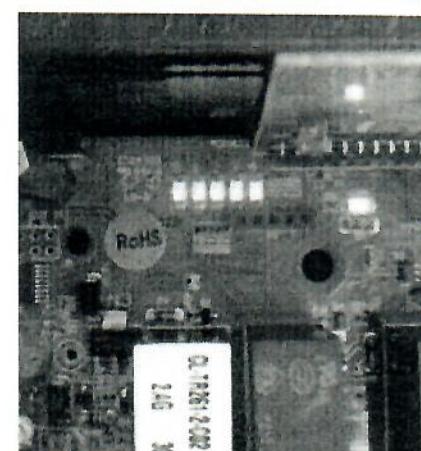

Warranty conditions

- We give 12 months warranty or a maximum of 1000 hours of use for material- and manufacturing faults. However, the warranty period ends 30 months after shipment from the manufacturer.
- The warranty takes effect when the product is delivered and the warranty card is filled out and returned to the factory.
- The warranty applies to manufacturing- and material faults, except hydraulic hoses, connections, seals, knives or saw-bars and -chains and parts that wear out.
- If the grapple has remote control the warranty for the remote control battery is 6 months.
- The warranty does not apply to normal wear out, wrong usage, wrong assembly or faults caused by deficient service.
- The warranty does not apply if the construction of the product has been changed.
- The warranty does not cover any shipping costs considering the product or spare parts, nor travelling costs for possible repair work.
- The warranty does not cover work costs considering installation and repairs.
- The warranty neither applies to faults that are a result of another fault that has not been attended to.
- The warranty is void if the product has been modified in any way.
- The warranty ceases to apply if the product has been repaired by someone else than the manufacturer or a workshop designated by the manufacturer, or if the hydraulic pressure has been raised over the allowed limit.
- The manufacturer will not cover losses of income because of possible suspension of work.
- The manufacturer will not pay consequential or punitive damages in any case.
- The warranty ceases to apply if the use- and service instructions have not been followed.
- All disputes which can not be resolved amicably between the parties, shall be exclusively decided by the district court of Itä-Uusimaa, Porvoo, Finland. Finnish law shall be applied.
- The reseller/distributor shall always fill out the warranty card at the moment of purchase and return it to the manufacturer. The warranty will be valid from this day.
- Warranty repairs will be done by the service network of the manufacturer. In some cases, an exception can be made if the manufacturer approves of it. For example, in case of simpler repairs the customer can change a specific part himself if approved by the manufacturer.
In the case of warranty repairs, take pictures of the faulty part, fill out the warranty application and send it to Mecanil Oy Ab with the parts order and pictures. The new parts will be shipped with an invoice.
Return the faulty parts that You apply for as warranty.
If the returned part is considered to be flawed due to manufacturing error, the invoice will be credited. In some cases the pictures are sufficient, and returning of the part will not be necessary. If this is the case, the manufacturer will inform of it.
- Only in urgent cases it is allowed to act differently and only in consultation with the manufacturer. If repairs are done by, for example, a non-authorized person or workshop, it has to be agreed in advance.
- The warranty application forms are attached to the manual that is delivered with every product.

Declaration of conformity



We,
Mecanil Oy Ab
Valtatie 565
07880 LILJENDAL
FINLAND

hereby declare that

Product: Grapple saw

Model: _____

Serial number: _____

Manufacturer: Mecanil Oy Ab, Valtatie 565, 07880 Liljendal, FINLAND

is manufactured in agreement with the machine directive 2006/42/EC and can be used on another product forming a complete machine

Liljendal, Finland

Place

Date

Manufacturer:
Mecanil Oy Ab



Pamela Nilsson-Nordström
CEO

Form - Warranty application

Date _____ / _____ 20 _____

All parts sent from the manufacturer may be invoiced. If a part is applied for as warranty the faulty part shall be returned to the manufacturer for inspection. If the application is approved the invoice will be credited.

Dealer

Owner

Product and model

Serial No.

Date of delivery

Work hours

Date of failure

Installed on (machine)

Other notes

Description of the failure

Repairs

Service hours

Service costs

Failed parts

Art. nr.

Description

Qty

Price

Other

Service done by

Notes for accepting warranty

Accepted

Qty	Comments
-----	----------

Work hours

Parts

Total to be credited